



44XRM Universal Sample Pump

Cat. No. 224-44XRM

Operating Instructions

863 Valley View Road, Eighty Four, PA 15330 USA • Tel: 724-941-9701 • www.skcinc.com

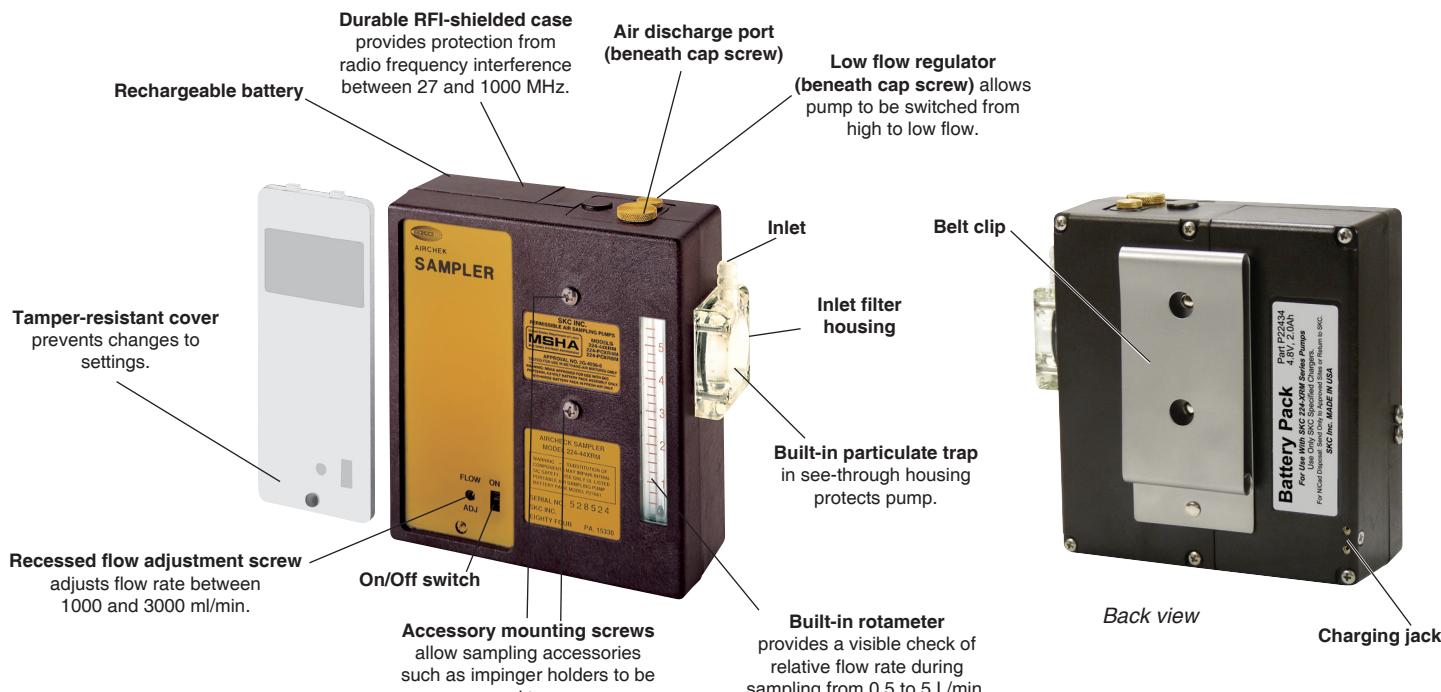


Figure 1. Front and back views of 44XRM Universal Sample Pump

Introduction

Description

The 44XRM Universal Sample Pump (*Figure 1*) is a constant flow (from 5 to 3000 ml/min) air sampler suitable for a broad range of applications. It is ideal for industrial hygiene studies as well as environmental testing.

Required Equipment/Media


- 1/4-inch ID (3/8-inch OD) Tygon® tubing
- PowerFlex® Charger and cable
- Low flow accessories if sampling at 5 to 500 ml/min. See *Accessories*.

Getting Started

Install the Battery Pack

 To enhance battery life, SKC ships battery packs separately from the pump. Once installed, completely charge the battery pack before operating the pump.

1. Remove the two screws that secure the battery pack and loosen the two case screws above and below the belt clip.
2. Carefully slide the battery pack out from under the belt clip. Ensure that the battery is kept level.
3. Slip the front edge of the new battery pack under the belt clip and position the battery pack to engage the grooves in the case.
4. Slide the battery pack toward the pump until it is flush with the pump case on all sides.
5. Reinstall two battery screws and tighten the case screws loosened in Step 1.
6. Charge the battery completely. See *Charge the Battery Pack*. **Note:** For optimum charge, ensure the pump is not running during charging.

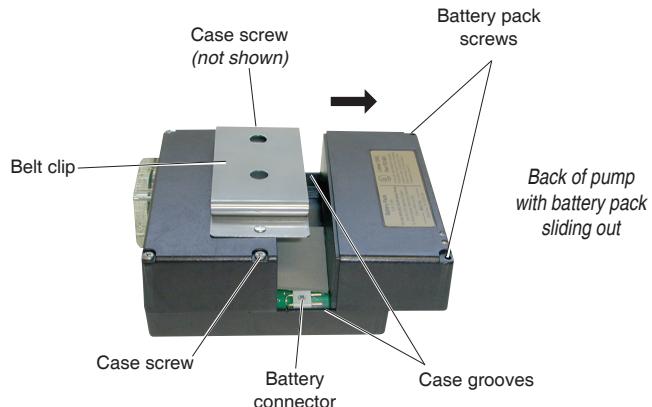


Charge the Battery Pack

1. Activate the charger. Follow *PowerFlex Operating Instructions 37783*.

 For optimum charge, ensure that the pump is not running.

2. Insert the charging cable connector into the charging port on the charger.
3. Insert the charging plug end of the cable into the jack on the back of the pump's battery pack (Figure 1).
4. Charge the battery completely (the LED at the port connected to the pump is a steady green) before using the pump.
5. Disconnect the charging cable from the back of the pump's battery pack.

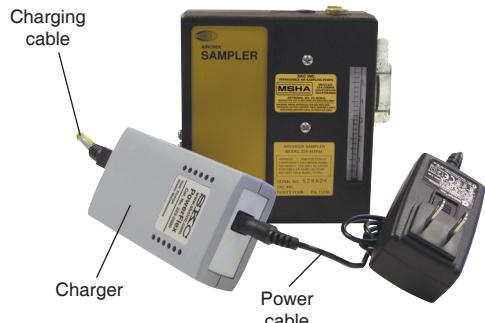

Charging Train with single PowerFlex charger

Notes and Cautions

- To comply with intrinsic safety regulations, do not charge or operate the pump from the charger in hazardous locations.
- Using a non-approved charger voids any warranty.
- Using a repaired or rebuilt battery pack voids MSHA approval and any warranty.
- Using any device other than the approved battery pack to power the pump voids MSHA approval.
- Ensure proper orientation of charging cable before plugging it into the charging jack. Improper orientation/contact will short-circuit the battery and voids any warranty.
- Short-circuiting the battery pack will render it immediately inoperative.
- Failure to follow warnings and cautions voids any warranty.

For more information on SKC pump battery packs, visit www.skcinc.com/catalog/pdf/instructions/1756.pdf.

Turn Pump Power On/Off (Figure 1)

Turn on: Remove the tamper-resistant cover. Move the on/off switch to ON.

Turn off: Move the on/off switch to OFF.

Operation

High Flow Applications (1000 to 3000 ml/min)

Deactivate the Regulator for High Flow

1. To ensure the pump is set for high flow, remove the cap screw (*Figure 1*) covering the regulator valve and turn the exposed screw **clockwise** until it stops. Do not overtighten. *See right.*
2. Replace the cap screw. The pump is now set for high flow.



For high flow, turn regulator valve screw clockwise.

Set/Calibrate Flow Rate

- Allow pump to equilibrate after moving it from one temperature extreme to another.
 - Charge pump battery completely before calibration and sampling.
1. Ensure that the battery is fully charged and that the pump has run for five minutes before calibrating. Leave the pump running.
 2. Prepare the calibrator (*see calibrator instructions*). Using flexible tubing, connect the calibrator outlet (suction port) to the sampling medium inlet.
 3. Using 1/4-inch Tygon tubing, connect the sampling medium outlet to the pump inlet (*Figure 2*).
 4. Set the flow rate using the flow adjustment screw (*Figure 1*) until the calibrator indicates the method-specified flow rate. Take a minimum of three readings and record the average flow rate, as per OSHA/NIOSH instructions.
 5. When calibration is complete, turn off the pump and disconnect the calibrator.

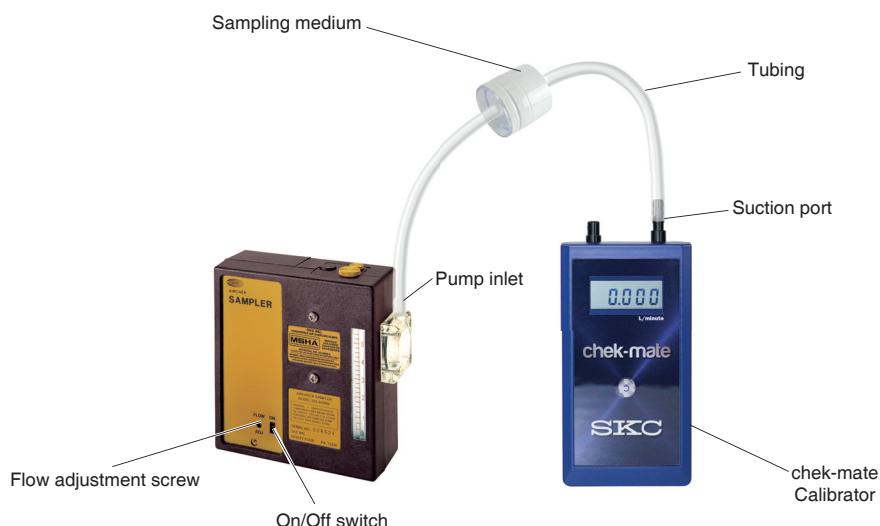


Figure 2. Calibration train with filter cassette

High Flow Applications (Cont)

Set Up/Sample

- Allow pump to equilibrate after moving it from one temperature extreme to another.
 - Protect sample pump from weather when in use outdoors.
 - Powering the pump with any device other than the approved battery pack voids MSHA approval.
 - Charge pump battery completely before calibration and sampling.
1. Replace the sampling medium used for calibration with an unexposed medium for sample collection.
 2. Place the sampling medium where appropriate for sampling.
 - a. For personal sampling, clip the sampling medium to the worker in the breathing zone.
- b. When using impingers, an in-line trap (SKC Cat. No. 225-22 or 225-22-01) is required to prevent fumes from accidentally being drawn into the sampler. Place the in-line trap between the pump and the impinger. Mount the impinger and trap to the face of the sampler using the accessory mounting screws (*Figure 1*) or place them in a holster at the worker's waist.
-  **Failure to use an appropriate in-line trap during impinger sampling voids any warranty.**
- c. When using the pump for pressure applications, such as bag sampling, thread the exhaust port fitting supplied with the pump into the air discharge port on top of the pump; hand-tighten only. Using PTFE tubing, connect the inlet of the sample medium (e.g., sample bag) to the exhaust port fitting on the pump. Turn on the pump to collect the appropriate volume of air. Shut off the pump and close inlet on sample medium to stop sampling.
 3. Start sampling by turning on the pump using the on/off switch (*Figure 1*). Record the start time.
 4. At the end of the sampling period, turn off the pump and record the stop time.
 5. Seal the sample and send it with blanks and pertinent sampling information to a laboratory for analysis.
 6. Verify the flow.
 - a. Turn on the pump and reinstate the calibration train and sampling media.
 - b. Take three readings and record the average value as the post-sample flow rate. **Do not adjust the pump flow rate during this step.**
 - c. Compare the pre and post-sample flow rates. Note in sampling documentation if the values differ by more than $\pm 5\%$.



Clip sampling medium to worker and pump to belt.



Impinger holder on pump with impinger and trap



Thread exhaust port fitting into air discharge port on pump.

Low Flow Applications (5 to 500 ml/min)

Using Single Adjustable Tube Holder (Figure 3)

Activate the Regulator for Low Flow

1. Start the pump using the on/off switch (Figure 2), and adjust the flow rate by turning the flow adjustment screw (Figure 2) until the built-in rotameter reads approximately 1.5 L/min.
2. Remove the cap screw covering the regulator valve (Figure 2) and turn the exposed screw four to five turns **counterclockwise**.
3. Replace the cap screw. The pump is now set for low flow.



For low flow, turn regulator valve screw counterclockwise.

Set/Calibrate Flow Rate for Single Tube

- Allow pump to equilibrate after moving it from one temperature extreme to another.
 - Charge pump battery completely before calibration and sampling.
 - Calibrate/verify pump flow rate before and after each sampling operation using the tube holder and pump to be used for sampling.
1. Ensure that the battery is fully charged and that the pump has run for five minutes before calibrating. Leave the pump running.
 2. Ensure that the regulator has been activated for low flow and the pump flow rate is set at 1.5 L/min.
 3. Connect the single adjustable tube holder to the pump inlet. See *calibration train*.
 4. Insert an opened sorbent tube into the rubber sleeve (Figure 3) of the low flow tube holder **with the arrow on the tube pointing toward the tube holder**.
 5. Prepare the calibrator. See *calibrator instructions*.
 6. Using flexible tubing, connect the exposed end of the sorbent tube to the calibrator outlet (suction port). Loosen the brass flow adjust screw (Figure 3) on the tube holder. Adjust the flow rate by turning the flow adjust screw (**counterclockwise to increase, clockwise to decrease**) until the calibrator indicates the desired flow. Take a minimum of three readings and record the average flow rate, as per OSHA/NIOSH instructions.

 **Do not adjust the flow on the pump. Adjust the flow only by using the flow adjust screw on the tube holder. Observe the flow rate on the calibrator.**

7. When calibration is complete, turn off the pump and disconnect the calibration tubing from the sorbent tube.

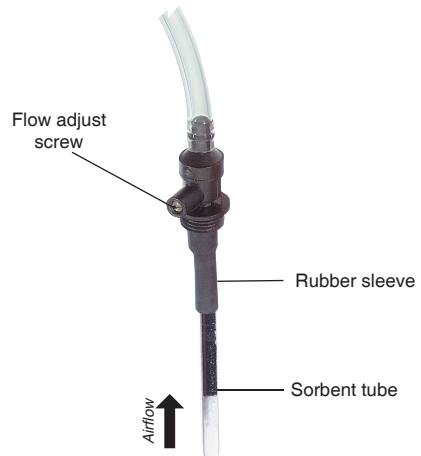


Figure 3. Single Adjustable Tube Holder with Sample Tube



Turn screw to adjust flow.



Calibration train with tube in adjustable tube holder

Low Flow Applications, Single Tube (Cont)

Set Up/Sample

- Allow pump to equilibrate after moving it from one temperature extreme to another.
- Protect sample pump from weather when in use outdoors.
- Powering the pump with any device other than the approved battery pack voids MSHA approval.
- Use of any device other than the approved battery pack to power the pump voids any warranty.
- Charge pump battery completely before calibration and sampling.
- Calibrate/verify pump flow rate before and after each sampling operation using the tube holder and pump to be used for sampling.

1. Replace the sorbent tube used to set the flow with a new unexposed sorbent tube for sample collection.
2. Place the appropriate size protective tube cover over the tube, and screw it into place on the tube holder.
For personal sampling, clip the tube holder to the worker in the breathing zone. *See right.*
3. Start sampling by turning on the pump using the on/off switch (*Figure 2*), and record the start time.
4. At the end of the sampling period, turn off the pump and record the stop time.
5. Seal the sample and send it with blanks and pertinent sampling information to a laboratory for analysis.
6. Verify the flow.
 - a. Turn on the pump and reinstate the calibration train and sampling media.
 - b. Take three readings and record the average value as the post-sample flow rate. **Do not adjust the pump flow rate during this step.**
 - c. Compare the pre and post-sample flow rates. Note in sampling documentation if the values differ by more than $\pm 5\%$.
7. To return to high flow, remove the tube holder and deactivate the regulator. *See Deactivate the Regulator for High Flow.*



Clip holder to worker and pump to belt.

Low Flow Applications (5 to 500 ml/min)

Using Multiple-tube Adjustable Tube Holder (Figure 4)

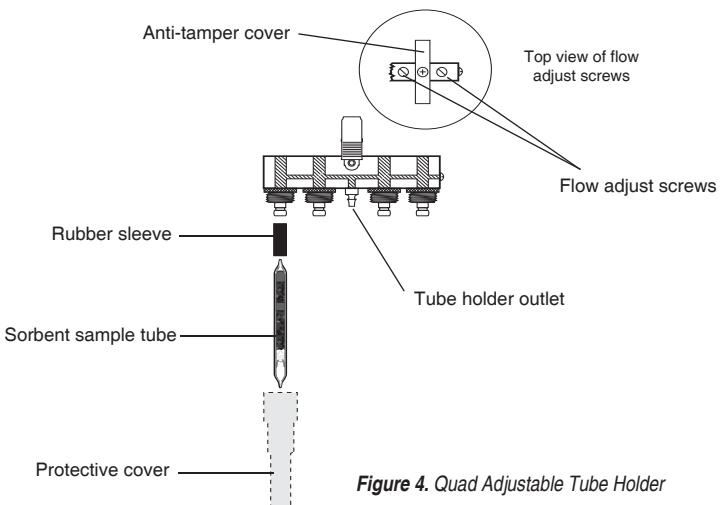


Figure 4. Quad Adjustable Tube Holder

Activate the Regulator for Low Flow

1. Start the pump using the on/off switch (Figure 1), and adjust the flow rate by turning the flow adjustment screw (Figure 1) until the built-in rotameter reads approximately 1.5 L/min.
2. Remove the cap screw covering the regulator valve (Figure 1) and turn the exposed screw four to five turns counterclockwise.
3. Replace the cap screw. The pump is now set for low flow.



For low flow, turn regulator valve screw counterclockwise.

Set/Calibrate Flow Rate for Multiple Tubes

- Allow pump to equilibrate after moving it from one temperature extreme to another.
- Charge pump battery completely before calibration and sampling.
- Calibrate/verify pump flow rate before and after each sampling operation using the tube holder and pump to be used for sampling.



Follow these important steps before proceeding:

1. Ensure that the battery is fully charged and that the pump has run for five minutes before calibrating. Leave pump running.
2. Ensure that the regulator has been activated for low flow and the pump flow rate is set at 1.5 L/min.
3. Calculate the sum of all tube flow rates. The maximum flow rate through any one tube is 500 ml/min.*
 - a. If the sum is \leq 1000 ml/min, set the pump flow rate to 1.5 L/min.
 - b. If the sum is $>$ 1000 ml/min, multiply that number by 0.15 and total the two numbers. Set the pump flow rate for the resulting new sum. (**Example:** Sampling with three sorbent tubes, each with a flow rate of 500 ml/min.* The sum of the tube flow rates is calculated as $3 \times 500 = 1500$. Determining a 15% higher flow rate is calculated as $1500 \times 0.15 = 225$. Calculating the final pump flow setting would be $1500 + 225 = 1725$ ml/min.)

* Back pressure across some sample tubes can be higher than average. In these instances, the maximum flow rate of 500 ml/min may not be achieved.

4. Connect the adjustable tube holder (Figure 4) to the pump inlet (Figure 1) using the attached 1/4-inch Tygon tubing. See right.
5. Insert an opened sorbent tube into each rubber sleeve of the tube holder (Figure 4). **Ensure that the arrow on each tube points toward the tube holder.**

 **If sampling with fewer tubes than number of ports, insert unopened sorbent tubes in the empty ports to seal them.**



Connect tube holder to pump inlet and tube inlet to calibrator.

Low Flow Applications, Multiple Tubes (Cont)

6. Prepare the calibrator. See *calibrator instructions*.
7. Using flexible tubing, connect the exposed end of the first sorbent tube to the calibrator outlet (suction port). Loosen and turn the brass flow adjust screw (*Figure 4*) on the port of the appropriate tube holder (**counterclockwise to increase, clockwise to decrease**) until the desired flow rate is achieved. **Note:** For tri and quad models, first rotate each anti-tamper cover (*Figures 4 and 5*) to expose the flow adjust screws, then adjust the appropriate one until the calibrator indicates the desired flow.

 **Do not adjust the flow on the pump. Adjust the flow only by using the flow adjust screw on the tube holder.**

 **Do not exceed 500 ml/min flow rate per tube.**

8. Disconnect the calibrator from the tube and connect it to the next sorbent tube. Repeat the flow adjustment process until all tubes are flow-calibrated. Changing the flow on one tube will not affect the flow rate through the remaining tubes.
9. When the flow rate is set for each tube, turn off the pump and disconnect the calibrator.

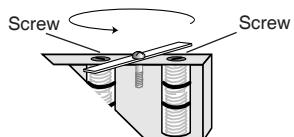


Figure 5
Cut-away of Tri/Quad
Adjustable Tube Holder

Set Up/Sample

- Allow pump to equilibrate after moving it from one temperature extreme to another.
 - Protect sample pump from weather when in use outdoors.
 - Powering the pump with any device other than the approved battery pack voids the MSHA approval.
 - Charge pump battery completely before calibration and sampling.
 - Calibrate/verify pump flow rate before and after each sampling operation using the tube holder and pump to be used for sampling.
1. Replace the sampling media used for calibration with unexposed media for sample collection. Use protective tube covers to prevent tube breakage.
 2. Place the sampling medium where appropriate for sampling. For personal sampling, clip the tube holder to the worker in the breathing zone.

Clip holder to worker and pump to belt.
 3. Start the sampling by turning on the pump using the on/off switch (*Figure 1*). Record the start time.
 4. At the end of the sampling period, turn off the pump and record the stop time.
 5. Seal the sample(s) and send with blanks and pertinent sampling information to a laboratory for analysis.
 6. Verify the flow.
 - a. Turn on the pump and reinstate the calibration train and sampling media.
 - b. Take three readings and record the average value as the post-sample flow rate. **Do not adjust the pump flow rate during this step.**
 - c. Compare the pre and post-sample flow rates. Note in sampling documentation if the values differ by more than $\pm 5\%$.
 7. To return to high flow, remove the tube holder and deactivate the regulator. See *Deactivate the Regulator for High Flow*.


Maintenance

Clean the Pump Inlet Filter

The 44XRM Universal Sample Pump is fitted with a filter/trap inside a clear plastic intake port housing. This prevents particles from being drawn into the pump mechanism. Visually check the filter to ensure that it does not become clogged. If maintenance is necessary, follow this procedure:

1. Clean dust and debris from around the filter housing.
2. Remove the four screws and the front filter housing.
3. Remove the O-ring.
4. Remove and discard the filter membrane.
5. Clean the filter housing.
6. Insert a new filter membrane and the O-ring.* See *Replacement Parts*.
7. Reattach the front filter housing and cross-tighten the four screws.

* Replace with new O-ring only as needed.

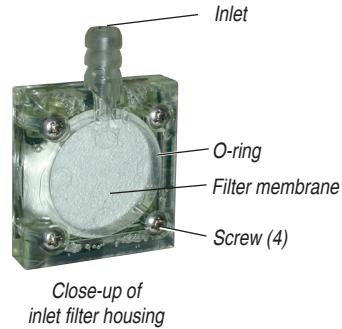

Maintain the Battery Pack

For proper maintenance of battery packs, SKC offers chargers (see *Accessories*) that condition the battery for optimum performance in 6 to 8.5 hours. For optimum charge, ensure pump is not running during charging. Follow charger instructions.

Fully charge packs before use. See *Charge the Battery Pack*. For more information on SKC pump batteries, visit <http://www.skcinc.com/instructions/1756.pdf>.

 **Ensure proper orientation of charging cable before plugging it into the charging jack. Improper orientation/contact will short-circuit the battery and voids any warranty.**

 **Short-circuiting the battery pack will render it immediately inoperative.**

Replace the Battery Pack

See *Install the Battery Pack*.

Notes and Cautions

- Use of a repaired or rebuilt battery pack voids any warranty and the MSHA approval.
- Use only SKC-approved charger and battery pack designed for the Universal 44XRM Sample Pump to ensure reliable performance. Failure to do so voids any warranty and MSHA approval.

For more information on SKC pump batteries, visit <http://www.skcinc.com/instructions/1756.pdf>.

Pump Service

Pumps under warranty should be sent to SKC Inc. for servicing. See *Limited Warranty and Return Policy*.

Accessories/Replacement Parts

Accessories	Cat. No.
chek-mate Calibrator with CalChek , 0.50 to 5 L/min, includes 9-volt alkaline battery and NIST-traceable calibration certificate	375-0550N
<u>Low Flow (5 to 500 ml/min) applications</u>	
Adjustable Tube Holders	
Single	224-26-01
Dual	224-26-02
Tri	224-26-03
Quad	224-26-04
Protective Sample Tube Covers	
A - 70 mm, standard charcoal	224-29A
B - 110 mm, large charcoal	224-29B
C - 150 mm	224-29C
D - 220 mm	224-29D
Battery Maintenance	
PowerFlex Charging System for SKC Personal Pumps	
5 Stations, 100-240 V	223-1000
Single, 100-240 V	223-2000
PowerFlex Pump Cable, for Universal XRM models	223-1003
Pump Accessories	
Screwdriver Set, included with pump	224-11
Protective Nylon Pouch with belt and shoulder strap	
Black	224-87
Red	224-95A



Protective
Nylon Pouch

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to <http://www.skcinc.com/warranty>.

Appendix

Performance Profile

Flow Range	1000 to 3000 ml/min (5 to 500 ml/min requires adjustable low flow holder)
Weight	34 oz (964 gm)
Dimensions	5.1 x 4.7 x 1.9 in (13 x 11.9 x 4.8 cm)
Compensation Range	1000 ml/min at 40 inches water back pressure 2000 ml/min at 40 inches water back pressure 3000 ml/min at 22 inches water back pressure
Flow Control	Holds constant flow to \pm 5% of the set point
Run Time	8 hrs minimum at 3000 ml/min and 20 inches water back pressure; dependent on media used.
Flow Indicator	Built-in rotameter with 250-ml division; scale marked at 1, 2, 3, 4, and 5 L/min
Power Supply	MSHA approved when used with rechargeable NiCad battery pack, 2.0 Ah capacity, 4.8 V, Cat. No. P22434 only. Recharge battery pack in fresh air only.
Charging Time <i>(varies with capacity and level of discharge)</i>	6 to 8.5 hrs with PowerFlex charger
Intrinsic Safety	MSHA-approved to 30 CFR, section 18; approval no. 2G-4036-0 Tested for use in methane-air mixtures only
Operating Temperature	32 to 113 F (0 to 45 C)
Storage Temperature	-4 to 113 F (-20 to 45 C)
Charging Temperature	50 to 113 F (10 to 45 C)
Operating Humidity	0 to 95% non-condensing Protect sample pump from weather when in use outdoors.
Multiple-tube Sampling	Built-in constant pressure regulator allows user to take up to four simultaneous tube samples at different flow rates up to 500 ml/min each using optional adjustable tube holder.
RFI/EMI Shielding	Complies with requirements of EN 55022, FCC Part 15 Class B, EN 50082-1; frequency range of the radiated susceptibility test was 27 to 1000 MHz.
Tubing	Requires 1/4-inch ID tubing

MSHA Approval Certificate

