

Leland Legacy Quick Guide

Terms »

Star button *

- Scrolls through run time data and Setup options

Up and down arrow buttons ▲▼

- Toggle between display choices and increase or decrease sampling parameters in Setup

Button sequence

▼ * = press buttons individually

[▲▼] = press simultaneously

▲▼ = security code, always press in sequence

Security code *▲▼*

- Prevents unauthorized changes to the pump's sampling program

Programming Sequences »

- **To activate pump (e.g., to change pump from Sleep to Hold):**
Press any button.
- **To change pump from Hold to Run or Run to Hold:**
Press [▲▼].
- **To reset accumulated data:**
Press [▲▼], then *▲▼*. Press * until *CLr* displays then press [▲▼]; press * until *End* displays then press [▲▼].
- **To set pump flow rate:**
Press [▲▼], then *▲▼*. Flow rate and SET flash. Press ▲ or ▼ to change flow rate. Press * until *End* appears then press [▲▼] to save setting and place pump in Hold.
- **To verify flow rate with standard flowmeter:**
Press [▲▼], then *▲▼*. Flow rate and SET flash. Press ▲ or ▼ to change flow rate. Press * once. *ADJ* displays. Press ▲ or ▼ until desired flow rate is indicated on flowmeter. When finished, press * until *End* displays then press [▲▼] to save new setting and place pump in *Hold*. *For CalChek Single-point Flow Verification and Full Calibration, see operating instructions.*
- **To change temperature scale from F to C or C to F:**
Press [▲▼], then *▲▼*. Press * until temperature displays. Press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting.
- **To change atmospheric pressure scale (mm, mb, in):**
Press [▲▼], then *▲▼*. Press * until pressure displays then press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting.
- **To change time scale (12 Hr/24 Hr/Dela):**
Press [▲▼], then *▲▼*. Press * until 12 Hr, 24 Hr, or Dela displays then press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting. *To set delayed start (Dela), see operating instructions.*
- **To change clock:**
Press [▲▼], then *▲▼*. Press * until clock displays then press ▲ or ▼ to change flashing hour; press * to move to minutes and ▲ or ▼ to change setting. Press * until *End* displays then press [▲▼] to save new setting.
- **To change the sampling time function:**
Press [▲▼], then *▲▼*. Press * until *ST L/min* displays then press ▲ to change flashing digit; press * until *End* displays then press [▲▼] to save new setting. To delete, follow above steps and press ▼ until 0 appears. Exit Setup.

Note: When in Setup, choosing Esc instead of End will exit Setup without saving new settings.