



## Operating Instructions


863 Valley View Road, Eighty Four, PA 15330 USA  
Tel: 724-941-9701 • [www.skinc.com](http://www.skinc.com)

### Mounting Bracket Accessory Cat. No. 228-9531

The Mounting Bracket accessory is used to mount a BioStage single-stage impactor onto the case of the QuickTake® 30 Sample Pump to facilitate bioaerosol sampling.

#### Mounting a BioStage Impactor

1. Place BioStage on L-shaped bracket. Align BioStage outlet in between two guide pins on bracket (10 o'clock position). Secure with thumbscrew on bottom of bracket.

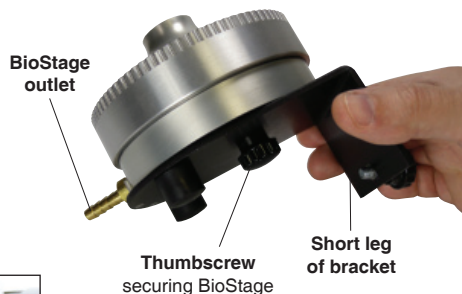


Close-up of outlet between guide pins

2. Place L-shaped bracket to the right on the pump faceplate with the short leg of the bracket fitting over the right edge of the pump. Align thumbscrew on short leg of bracket with the hole on the side of the pump. Secure bracket to pump with thumbscrew.



3. Connect the inlet adapter tubing to the BioStage outlet and insert the inlet adapter (included with bracket) into the pump inlet.

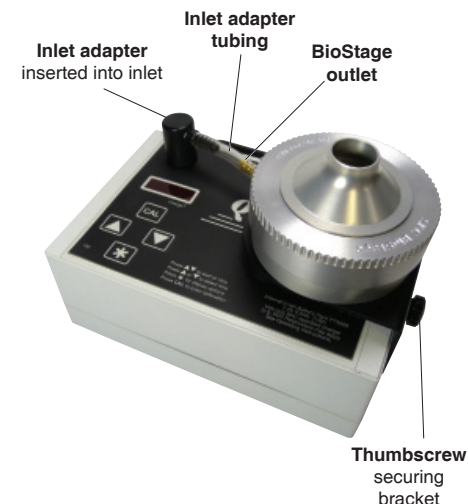

#### Ordering

Description	Cat. No.
Mounting Bracket includes bracket with thumbscrews, inlet adapter, and tubing	228-9531
Replacement Inlet Adapter	P20156

#### SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to <http://www.skinc.com/warranty>.

[www.skinc.com](http://www.skinc.com)