

MethAlert Quick Guide

This Quick Guide provides only a brief overview of the procedure. Read complete operating instructions for details prior to first use of MethAlert.



Keep solutions at $\leq 39.2^{\circ}\text{F}$ (4°C) at all times. Pack in cooler with ice for field use. Do not store with food. Cap tightly.

Wear supplied gloves for all procedures.

1



Place

items on wax paper.

2



Place

template on test surface.

3



Spray

Step 1 Wetting Agent
2 times.

4



Wipe

test surface.

5



Spray

Step 2 Developer 2 times.
(Keep cold before and after use.)

6




Spray

Step 3 Developer
4 times.

7

Read Results

Observe gauze. Results start to appear within 1 minute and complete in 5 minutes.

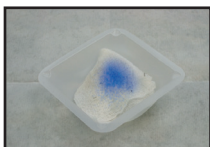


Positive, meth residue
detected between 15 and 5000 μg .
(Color bloom intensity may vary.)



Negative, meth residue not
detected at 15 μg LLOI.

8

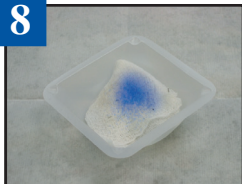

Photograph

Positive color bloom lasts
15 to 20 minutes.

9



Dispose

Place disposable items in resealable
bag. Dispose observing federal, state,
and local environmental regulations.

