



## DataTrac dB Software for NoiseCHEK User Manual

### INTRODUCTION

#### Checking System Requirements

Ensure your PC meets minimum requirements for DataTrac® dB Software.

<b>Operating System</b>	Microsoft® Windows® 10
<b>Required Software</b>	DataTrac dB Installer ( <i>included with installation</i> )
<b>Minimum Display Resolution</b>	1024 x 768
<b>Available Port</b>	USB 2.0

#### Checking Hardware Requirements

- 1-unit Charging Dock Cat. No. 701-002 or 5-unit Charging Dock Cat. No. 701-003
- USB cable
- DataTrac dB Software USB drive
- NoiseCHEK Personal Noise Dosimeter Cat. No. 701-001, 701-001S, 701-001NB, or 701-001NBS

### GETTING STARTED

#### Connecting NoiseCHEK to PC and Installing Software

- *Do not apply stickers to the back of the dosimeter because this can cause connectivity issues while the dosimeter is in the charging dock.*

The NoiseCHEK noise dosimeter communicates with a PC via USB cable and charging dock (1 or 5-unit) and DataTrac dB software (see Figure 1). Connect up to five NoiseCHEK dosimeters in the 5-unit charging dock to upload settings.

1. Connect charging dock to PC using included USB cable.
2. Download from <https://www.skcinc.com/catalog/datatrac/DataTracdB/setup.exe> or copy from USB drive “setup.exe” and install DataTrac dB as instructed. DataTrac dB will launch automatically.



**The DataTrac dB Installer requires administrator privileges to install properly.**

3. Place noise dosimeter(s) in the charging dock to complete the communication train shown in Figure 1. **Note:** DataTrac dB will only detect dosimeters that are properly seated in the connected charging dock.



Figure 1. Communication Train

#### Updating DataTrac dB Software

DataTrac dB will scan automatically for available online updates each time it is launched. If an update is found, the user will be asked to install now, install later, or ignore.

## Uninstalling DataTrac dB Software


1. Access the Windows Control Panel on the PC.
2. Select Programs (Programs and Features).
3. Select DataTrac dB.
4. Click Uninstall.


## USING DATATRAC DB SOFTWARE

### Detecting/Selecting Devices



**Connect the charging dock to your PC before launching DataTrac dB software.**

When dosimeters are placed in the charging dock (see *Figure 1*), DataTrac dB will scan for connected devices. **Note:** *DataTrac dB will only detect dosimeters that are properly seated in the connected charging dock.* The names of detected devices will appear under the Connected devices bar at the upper left corner of the DataTrac dB screen (*Figure 2*). If the names of connected devices are not displayed automatically under the bar, click the Rescan icon .

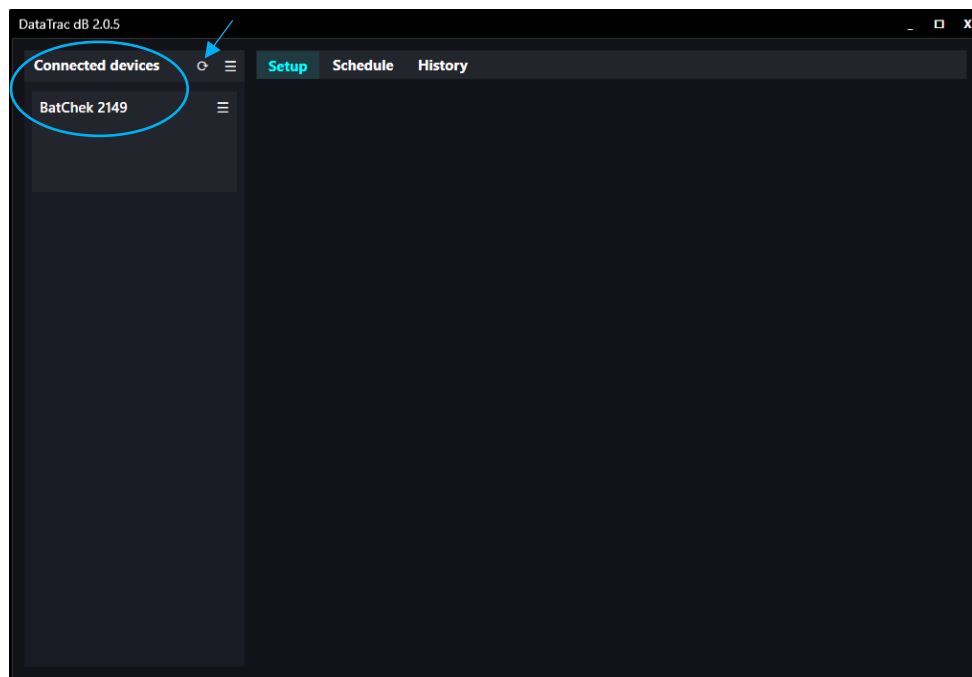

*Figure 2. DataTrac dB Screen Showing Detected Device*

Select the desired connected device by clicking on its tabs in the bar; the tab will become highlighted and display the appropriate operation button as shown in *Figure 3*, depending on whether you are in Setup, Schedule, or History. In the selected device tab, use the menu to set or change the options shown for that device. See *Setting/Changing Device Options*.

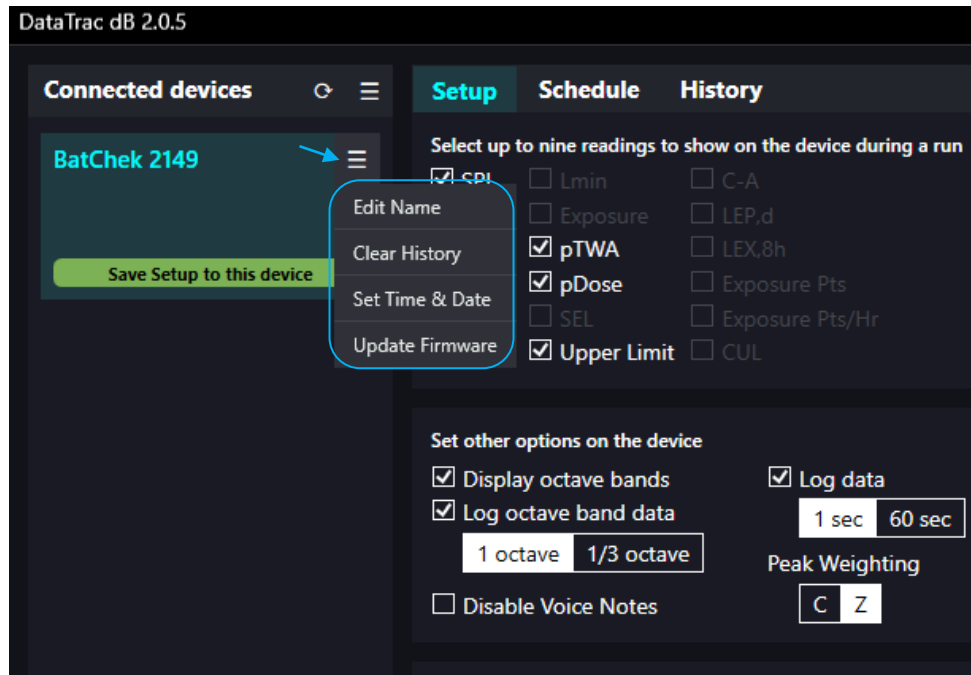

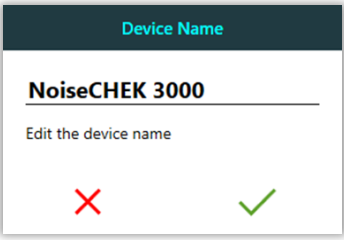
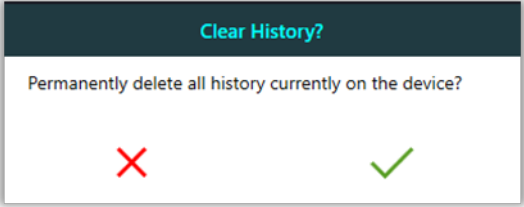
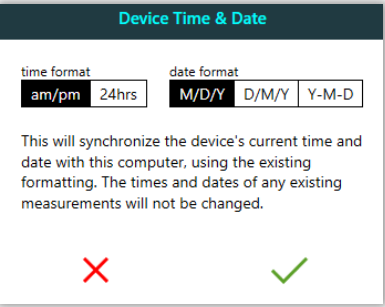
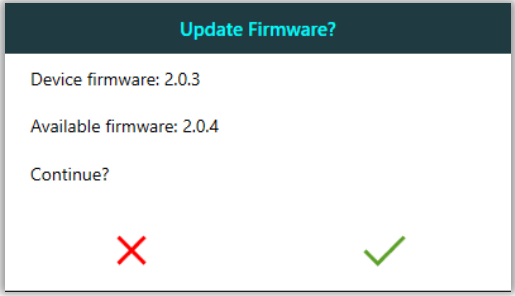


Figure 3. Selected Device Tab and Menu Options


## Setting/Changing Device Options

Click on the menu  in the selected device tab (see Figure 3) to enter or edit the name, clear the history, set time and date, and update firmware for the device (see Table 1).

**Table 1. Selected Device Menu Options**

<p><b>Edit Name:</b> Enter/edit name for device and click on check mark.</p>	
<p><b>Clear History:</b> Click on check mark to permanently clear history from selected device.</p>	
<p><b>Set Time &amp; Date:</b> Select time and date format and click on check mark to save settings.</p>	
<p><b>Update Firmware:</b> Click on check mark to update firmware to latest version.</p>	

## Applying Actions to All Connected Devices

When multiple devices are connected in the 5-unit charging dock, use the Connected devices menu  to apply the following actions under any operation (Setup, Schedule, or History) to all connected devices at one time (see Figure 4):

- Save Setup to All (Setup tab only), Save Schedule to All (Schedule tab only), and Download History from All (History tab only)
  - Clear History for All
  - Set Time & Date for All
1. Select the desired operation tab (Setup, Schedule, or History).
  2. Click on the Connected devices menu icon and select the desired option (*Figure 4 shows the menu options for Setup*). A check mark will appear briefly under each device name to indicate that the selected option has been applied to it.

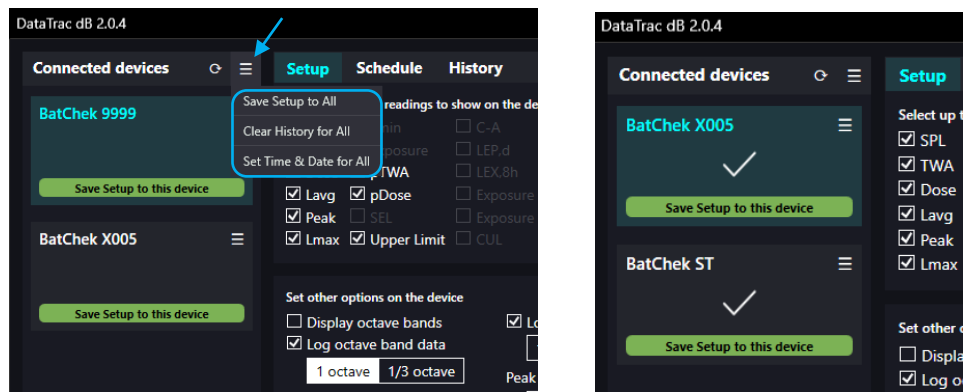


Figure 4. Connected devices Menu Options and Application  
(Example from Setup)

## Setup — Programming and Uploading Presets (Figure 5)

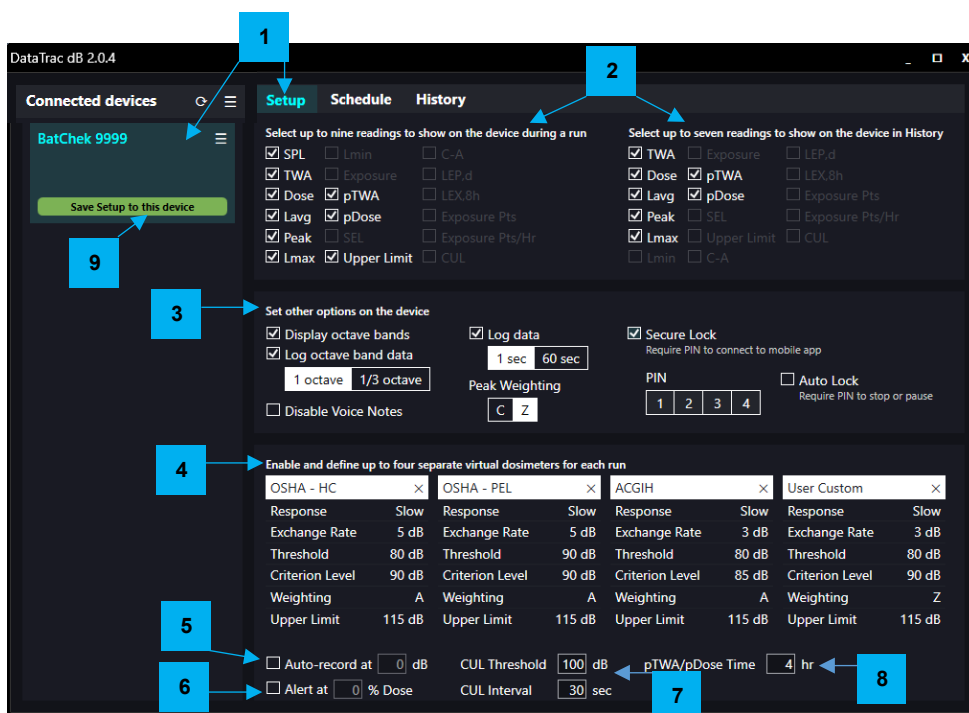


Figure 5. Setup

1. With a device selected, select Setup tab.
2. Select measurement readings to be displayed on the device during a run (up to nine) and in History (up to seven); the following readings are available:

Select up to nine readings to show on the device during a run				Select up to seven readings to show on the device in History			
<input type="checkbox"/> SPL	<input type="checkbox"/> Lmin	<input type="checkbox"/> C-A		<input type="checkbox"/> TWA	<input type="checkbox"/> Exposure	<input type="checkbox"/> LEP,d	
<input type="checkbox"/> TWA	<input type="checkbox"/> Exposure	<input type="checkbox"/> LEP,d		<input type="checkbox"/> Dose	<input type="checkbox"/> pTWA	<input type="checkbox"/> LEX,8h	
<input type="checkbox"/> Dose	<input type="checkbox"/> pTWA	<input type="checkbox"/> LEX,8h		<input type="checkbox"/> Lavg	<input type="checkbox"/> pDose	<input type="checkbox"/> Exposure Pts	
<input type="checkbox"/> Lavg	<input type="checkbox"/> pDose	<input type="checkbox"/> Exposure Pts		<input type="checkbox"/> Peak	<input type="checkbox"/> SEL	<input type="checkbox"/> Exposure Pts/Hr	
<input type="checkbox"/> Peak	<input type="checkbox"/> SEL	<input type="checkbox"/> Exposure Pts/Hr		<input type="checkbox"/> Lmax	<input type="checkbox"/> Upper Limit	<input type="checkbox"/> CUL	
<input type="checkbox"/> Lmax	<input type="checkbox"/> Upper Limit	<input type="checkbox"/> CUL		<input type="checkbox"/> Lmin	<input type="checkbox"/> C-A		

**Note:** If the maximum number (nine or seven) is selected, the unselected readings will be grayed out as shown in Figure 5.

3. Select other options on device (see left to right in Setup screen) as desired:

**When all four virtual dosimeters and octave band data logging are enabled and log data is set to 1 second, it will take approximately 3 hours (1/3 octave) or 1 hour (1 octave) to download data accumulated during an 8-hour run. Select log octave band data and 1 second log interval only if you need and intend to use this kind of data.**

**Octave bands** — Activate octave band view and/or octave band datalogging to display octave bands on virtual dosimeters and/or log octave band data.

**Log Data** — Set desired data logging rate.

**Secure Lock** — Activate/deactivate as desired. Secure Lock enables Auto Lock.

- Secure Lock** requires a PIN (four-digit using 1234) to connect to SKC SmartWave dB mobile app. **NoiseCHEK ships with Secure Lock activated and PIN set to 1234.**

- b. **Auto Lock** requires a PIN to **pause** or **stop** sampling using the dosimeter buttons. All other commands are available on the device including start sampling.

**Disable Voice Notes** — Select or deselect Disable Voice Notes as desired.

**Peak Weighting** — Select C or Z peak weighting. **Note:** 'A' peak weighting is an option in User Custom virtual dosimeter. See *Defining User Custom Virtual Dosimeter*.

4. Select/enable virtual dosimeters. Click on drop-down menu and select from OSHA HC, OSHA PEL, MSHA HC, MSHA PEL, ACGIH, and User Custom (see *Defining a User Custom Virtual Dosimeter*). **Note:** To disable a programmed virtual dosimeter, click on the X next to the dosimeter name.
5. Activate **Auto-record** feature to enable audio recording of an event exceeding the set dB level. 0 dB level deactivates audio recording. The length of a single stored audio event is 10 seconds. The noise dosimeter can store up to 24 such events, after which new recordings will overwrite the oldest ones. The event log will still note recordings that are overwritten. Auto-threshold audio recordings (audio captures) and other events are indicated in the History summary. See *Summary – Viewing, Editing, and Reporting Data*.
6. Activate **Alert** feature at set % Dose. If the set level is exceeded, the amber LEDs will flash in an alternating pattern with green LEDs, approximately every 2 seconds.
7. If applicable, set **CUL Threshold** and **CUL Interval** values. CUL (Continuous Upper Limit) equals the number of times the set threshold was exceeded continuously for the set interval. Any continuous event lasting for the set interval counts as one, so using the values set in Figure 4 (117 dB and 30 sec) as an example, CUL = 1 for an event continuously lasting for more than 30 seconds but less than 59 seconds, 2 for an event lasting for 60 to 89 seconds, and so on. Each subsequent continuous event lasting for the set interval is added to the overall count.
8. In **pTWA/pDose Time** enter desired number of hours of work shift duration, which will be used to calculate projected values. Dosimeters are shipped with preset time of 8 hr.
9. Click on **Save Setup to this device** in selected device tab to upload setup to selected dosimeter. A check mark appears briefly under the device name to indicate that presets have been saved. **Note:** To upload the setup to **all** connected devices, click on the *Connected devices* menu and select option *Save Setup to All*. See *Applying Actions to All Connected Devices*.

### Defining a User Custom Virtual Dosimeter (Figure 6)

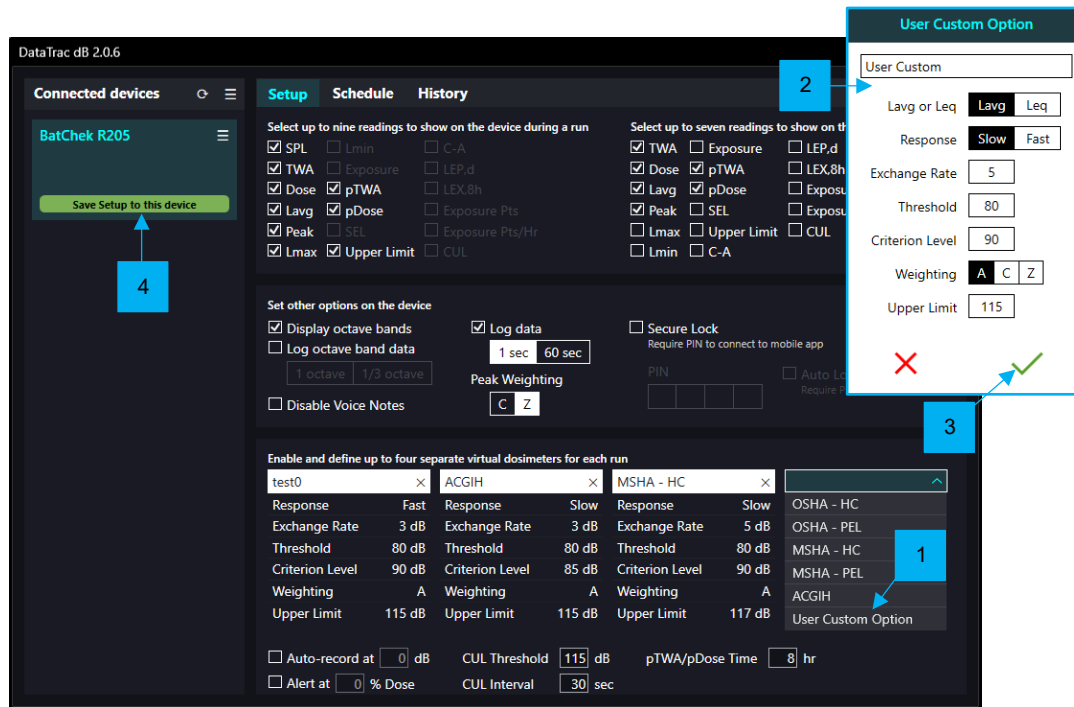


Figure 6. User Custom Option

1. Select User Custom from virtual dosimeter dropdown.
2. Select and enter desired custom virtual dosimeter name and measurements in the pop-up User Custom Option window.
3. Click on the check mark to save settings.
4. Click Save Setup to this device in selected device tab to upload settings. **Note:** *To upload the setup to **all** connected devices, click on the Connected devices menu and select option Save Setup to All. See Applying Actions to All Connected Devices.*



## Schedule – Scheduling Sample Runs (Figure 7)

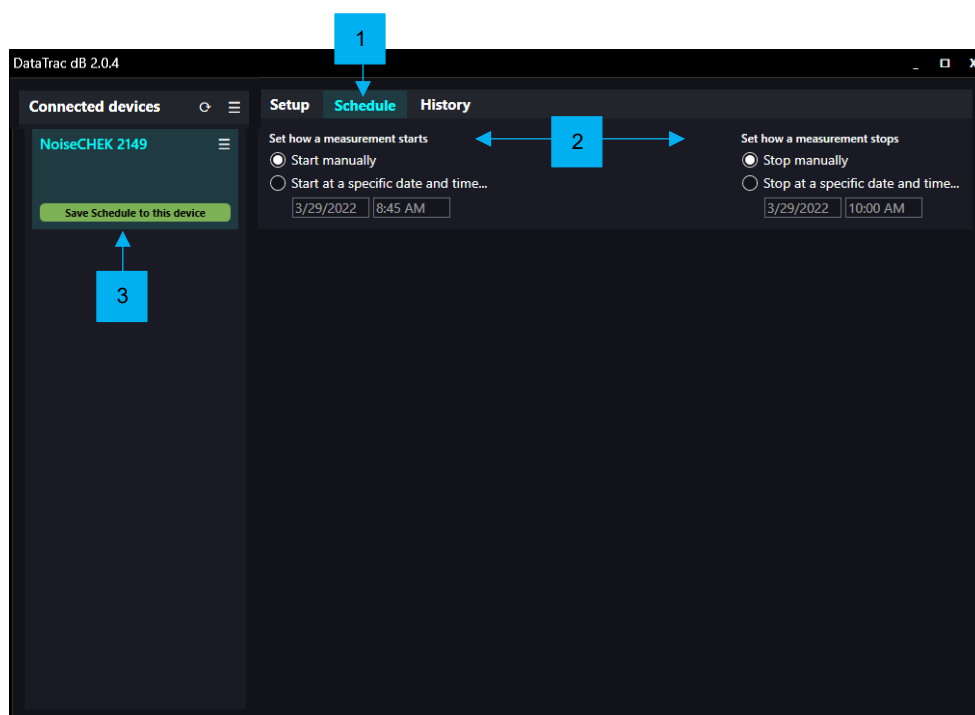


Figure 7. Schedule Sample Run

1. Select Schedule tab.
2. Select manual or scheduled start/stop for measurement. Manual start and stop are selected above; for scheduled start/stop, select “Start/Stop at a specific date and time...” and enter desired dates and times.
3. In the selected device tab, click Save Schedule to this device to upload schedule. **Note:** To upload the schedule to **all** connected devices, click on the Connected devices menu and select option Save Schedule to All. See Applying Actions to All Connected Devices.

## History – Downloading, Managing, Reporting, and Sharing Data

Download history as often as possible to keep all history records. When a device memory is full, it will automatically record over the oldest records.

- Download history as often as possible as it may take up to 30 minutes to download a full memory.
- The sampling time stored in History ranges from 40 hours to hundreds of days depending on sampling rate, number of virtual dosimeters enabled, and whether octave bands are activated. With sampling rate set at 60 sec and fewer virtual dosimeters enabled and octave bands not enabled, a device can store more hours.
- The noise dosimeter can store up to 24 audio recordings and 30 voice notes. When those numbers are exceeded, the oldest recordings will be overwritten.
- DataTrac dB will not download data to a PC if the same data is already there.
- Although History (includes data, audio recordings and voice notes) can be deleted using DataTrac dB software (see Clear History in Table 1 or Clear History for All in Applying Actions to All Connected Devices), there is no need to do so as the noise dosimeter will automatically record over the oldest records when its memory is full.

## Downloading History to PC (Figure 8)


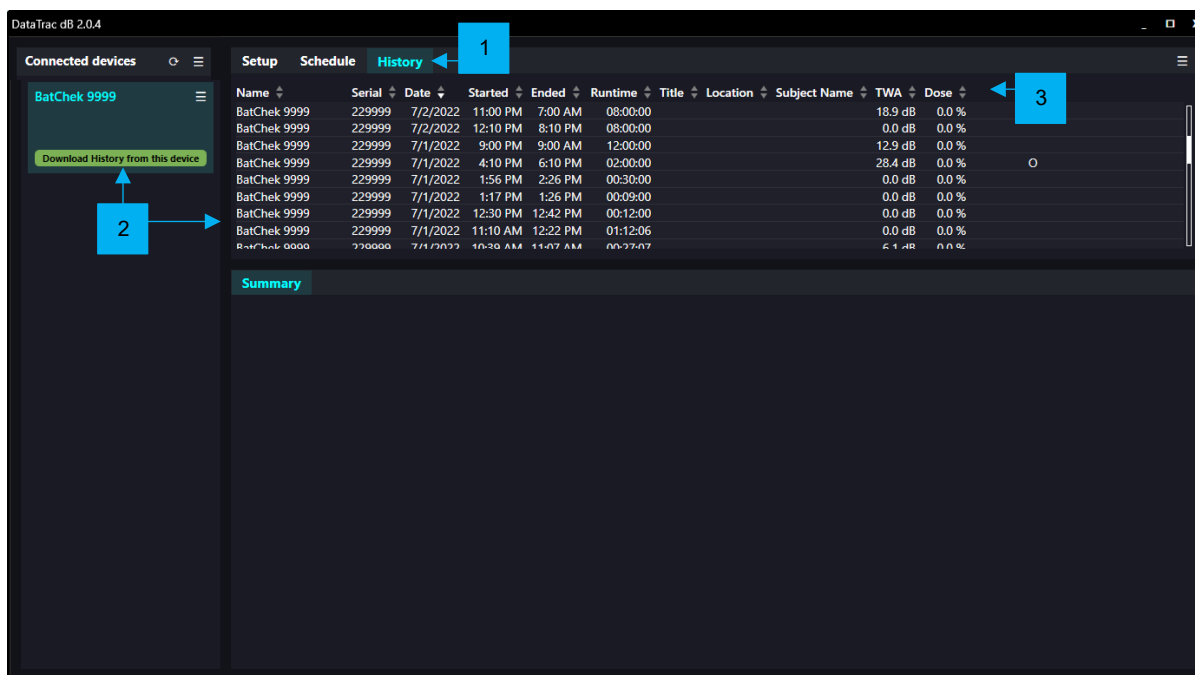


Figure 8. Download History from Device

1. Select History tab.
2. In the selected device tab, click Download History from this device for sample run history. The downloaded history will be displayed. **Note:** To download history from **all** connected devices, click on the Connected devices menu and select option Download History from All. See Applying Actions to All Connected Devices.
3. Sort records by serial number, date, start/end times, run time, title, location, subject name, TWA, or dose by clicking on the up/down arrows next to the desired parameter.

Notations N, A, V, and O indicate the following:

- N** Text note added from mobile app before connecting device(s) to PC or added in DataTrac dB after connecting device(s) to PC. See *Add/Edit Note*.
- A** Audio recording above set threshold. Click Listen in Summary or audio capture in graph to play back the recording.
- V** Voice note present. Click Listen in summary to hear the recorded note.
- O** Overload – During the sample run, sound pressure level exceeded 140 dB for > 4 milliseconds

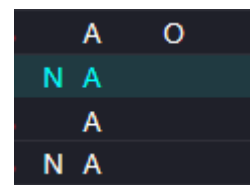

### Sharing, Deleting, or Combining Sample Run Data (Figure 9)

The options to share, delete, or combine data are available in the menu at the top right of the History screen, allowing you to:

- Share downloaded sample run data on with DataTrac dB software on different PCs by importing or exporting run files
- Delete data from history
- Combine data from the same actual or virtual dosimeter

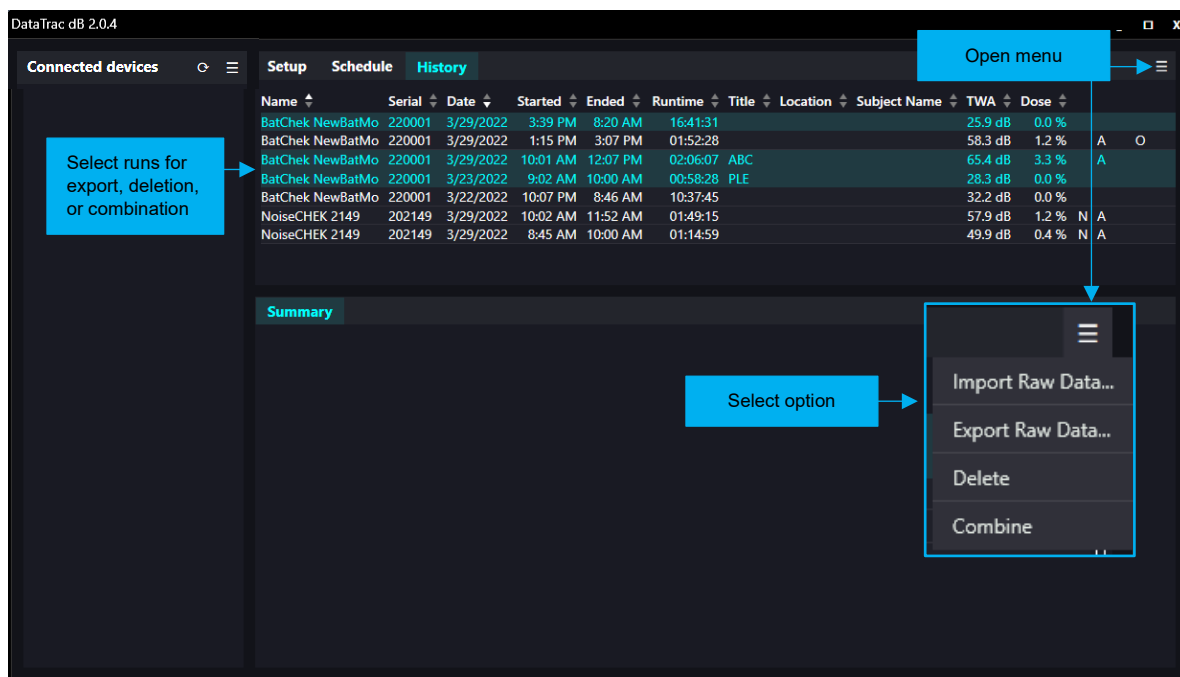


Figure 9. Import, Export, Delete, or Combine Sample Run Data

**Note:** Export Raw Data and Delete are not enabled options unless a run is selected. Combine is available only when two or more compatible runs (i.e., from the same dosimeter) are selected.

#### Import Raw Data

1. Click on menu icon to open. Select Import Raw Data.
2. Select and save appropriate Exported Runs file [.skca file(s)] to DataTrac dB on your PC.
3. The imported runs will appear in the History in your DataTrac dB.

#### Export Raw Data, Delete, or Combine

1. Select runs for export to DataTrac dB on another PC, deletion from downloaded history, or combination of data into one report.
  - a. **To select all or consecutive runs**, select the first one and hold the Shift key when selecting the last one.
  - b. **To select multiple individual runs that are not consecutive**, select the first one and hold the Ctrl key while selecting the other desired runs.

- Click on menu icon to open. Select Export Raw Data, Delete, or Combine:

**Export Raw Data** saves selected sample runs to a .skca file for import to DataTrac dB on another PC.

**Delete** removes selected sample runs from the downloaded history.

**Combine** creates a combined report for two or more compatible runs (however, graphs are not combined). The Create Report window will display “Combined log” and applicable options on the left side. Make the desired selections and entries and click on the check mark to create the report and save it to your PC.

## Summary – Viewing, Editing, and Reporting Data (Figure 10)

The screenshot shows the DataTrac dB 2.0.4 software interface. On the left, a sidebar lists 'Connected devices' with 'NoiseCHEK 3000' selected. Below it is a 'Download History from this device' button. The main area has tabs for 'Setup', 'Schedule', and 'History'. The 'History' tab is active, displaying a table of test runs. A blue callout box with the number '1' points to a specific run entry. Below the table, there are tabs for 'Summary', 'Logs', and 'Zones'. The 'Summary' tab is active, showing a detailed view of the selected run. A blue callout box with the number '2' points to the 'Summary' tab. On the right side of the 'Summary' tab, there is a 'Create Report' button, which is pointed to by a blue callout box with the number '3'. The 'Summary' view includes sections for 'OSHA HC', 'OSHA PEL', and 'ACGIH' standards, each with a list of metrics and values. At the bottom, there is an 'Info' section with details about the test run, including title, company, location, subject name, sample manager, calibrator model, and comments. There are also sections for 'Voice Note' and 'Text Note' with buttons to 'Listen' and 'Edit Note' respectively. A 'Add a New Note' button is at the bottom.

Figure 10. Summary

- Click on the desired run to select it.
- View the run data. Edit Info, listen to voice notes, and edit or add text notes as desired. See *Edit/Add Note*. **Note:** When you add zones in the Logs graph (see Logs or Zones), both the

original and modified summaries will be displayed as well as a warning that data has been modified.

3. Click Create Report to create a summary report in PDF or Word (DOCX) format. In the Create Report window (Figure 11), make the desired selections and entries.

**Note:** Select Readings allows selection of readings to be shown (Figure 11a) in the report. Selection buttons to export original summary, modified summary, or both summaries and the warning “Modified summary” appear only if you modified data in the selected run history by adding exclusion zones (see Logs or Zones). Click on the check mark to create and save the report to your PC or on X to close the window without creating the report. See the sample report in Appendix B.


Figure 11. Create Report

Figure 11a. Select Readings to Show

### Add/Edit Note


Text notes can be added and edited in Summary and Logs.

1. **In Summary:** Click Add a New Note (*see Figure 10*).
2. **In Logs:** Click add note icon (*see Logs*) and place the cursor where desired in the graph. Enter text in the Add Note window (*see below*) and click the check mark to save or X to close without saving.

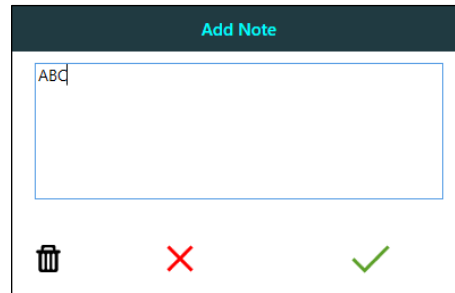

The 'Add Note' dialog box features a dark blue header with the title 'Add Note' in white. Below the header is a large white text input area containing the text 'ABC'. At the bottom of the dialog, there are three icons: a trash can icon on the left, a red 'X' icon in the center, and a green checkmark icon on the right.

3. The saved note will appear in the Summary, Log graph, and created summary report.
4. To edit or delete a note, click Edit Note on that line in the summary or click on the note in the graph. In the Edit Note window (*see below*), edit text and save or click on the wastebasket icon to delete; if deleting, a Delete note? window will be displayed for your confirmation of the deletion.

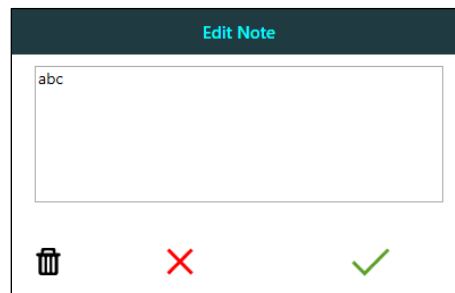

The 'Edit Note' dialog box has a dark blue header with the title 'Edit Note' in white. It contains a white text input area with the text 'abc'. The bottom of the dialog features three icons: a trash can icon on the left, a red 'X' icon in the center, and a green checkmark icon on the right.

## Logs – Viewing and Exporting Data Log

Select Logs (*Figure 12*) to display the graph for the selected measurement run. Measurements for all the programmed virtual dosimeters are contained in one graph. View and export the data using the features and functions described below.



Figure 12. Data Log for Selected Run History

- Add zone.** Click icon and use cursor to drag and select desired zone. In Add Zone window (see below), select exclusion or offset, start/end times, and +/- dB value as applicable. Also see Zones – Exclusion and Offset. A warning message that data has been modified will appear in the Summary and, if the modified summary is exported when creating a report (see Figure 11), in the summary report. See the example in Appendix B.

**Add Zone**

Start: 01:07:50
End: 01:20:33

☒ Exclusion Zone  
☐ Offset Zone

dB

✗
✓

- Add note.** Click icon and then click in desired location in graph to open Add Note window (see Add/Edit Note). Enter text and select check mark to save. An “N” will be displayed at the top of the graph. To view and/or edit note, see Step 6 below.

3. **Zoom.** Click icon and then click in graph and drag cursor over desired area. A navigation bar will appear at the bottom of the zoom area (*see below*).



4. **Select readings and Y-axis range.** Click double-arrow and select up to eight readings to display in graph and Y-axis range values from displayed menu (*see below*); click double-arrow again to return to graph.

All	OSHA HC	OSHA PEL	ACGIH	User Custom
<input checked="" type="checkbox"/> Peak	<input type="checkbox"/> TWA	<input type="checkbox"/> TWA	<input checked="" type="checkbox"/> TWA	<input type="checkbox"/> TWA
	<input checked="" type="checkbox"/> Lavg	<input type="checkbox"/> Lavg	<input type="checkbox"/> Lavg	<input type="checkbox"/> Lavg
	<input type="checkbox"/> Leq	<input type="checkbox"/> Leq	<input type="checkbox"/> Leq	<input type="checkbox"/> Leq
	<input type="checkbox"/> Lmax	<input checked="" type="checkbox"/> Lmax	<input type="checkbox"/> Lmax	<input type="checkbox"/> Lmax
	<input type="checkbox"/> Lmin	<input type="checkbox"/> Lmin	<input type="checkbox"/> Lmin	<input type="checkbox"/> Lmin
	<input type="checkbox"/> SEL	<input type="checkbox"/> SEL	<input type="checkbox"/> SEL	<input type="checkbox"/> SEL
	<input type="checkbox"/> pTWA	<input type="checkbox"/> pTWA	<input type="checkbox"/> pTWA	<input type="checkbox"/> pTWA
	<input type="checkbox"/> C-A	<input type="checkbox"/> C-A	<input type="checkbox"/> C-A	<input type="checkbox"/> C-A
	<input type="checkbox"/> LEP,d	<input type="checkbox"/> LEP,d	<input type="checkbox"/> LEP,d	<input type="checkbox"/> LEP,d
	<input type="checkbox"/> LEX,8h	<input type="checkbox"/> LEX,8h	<input type="checkbox"/> LEX,8h	<input type="checkbox"/> LEX,8h

Y-Axis Range  
 Max  dB  
 Min  dB

5. **Audio capture.** Click to listen.
6. **Note.** Click to view/edit/delete. *See Add/Edit Note.*
7. **Undo zoom.** Click to undo zoom.
8. **Overall run** (Leq of first dosimeter)
9. **Motion indicator** indicates if dosimeter was moving or stationary at a given point.
10. **Copy graph to clipboard.** Click to copy graph and then paste it in any document or email.
11. **Save Octave Band CSV and Save Log CSV.** Click to export desired data into .csv files and save to a PC. *See sample in Appendix C.*



### View Readings at Selected Point in Run

With no icon selected, click on desired point in the graph to see reading values on top of the graph (Figure 13). The vertical line indicates the time of displayed readings. Click on the line and move it to see how readings change over time.

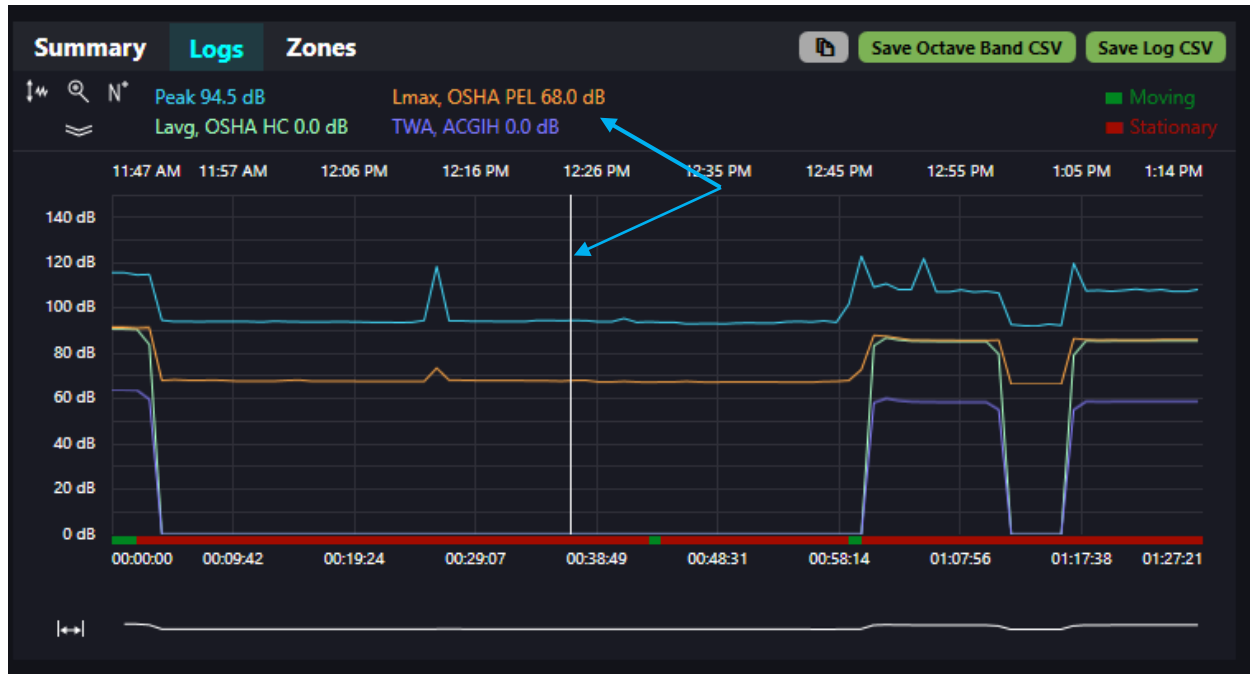


Figure 13. View Readings at Selected Point in Graph

## Zones – Exclusion and Offset

Use the Zones tab to add or edit exclusion and offset zones (Figure 14) in the data log. **Note:** You can also add zones via the Logs tab by clicking on the add zone icon (see Figure 12). Click in the graph and use the cursor to add the zone where desired; click on the check mark to save.

An **exclusion zone** removes a span of run time from the data, allowing for a “what if” view or analysis.

An **offset zone** allows you to see what the exposure would be if the noise level during the selected time span were higher or lower than the selected dB value.

When exclusion or offset zones are added, a warning message that data has been modified will appear in the Summary and, if the modified summary is exported when creating a report (see Figure 11), in the summary report.

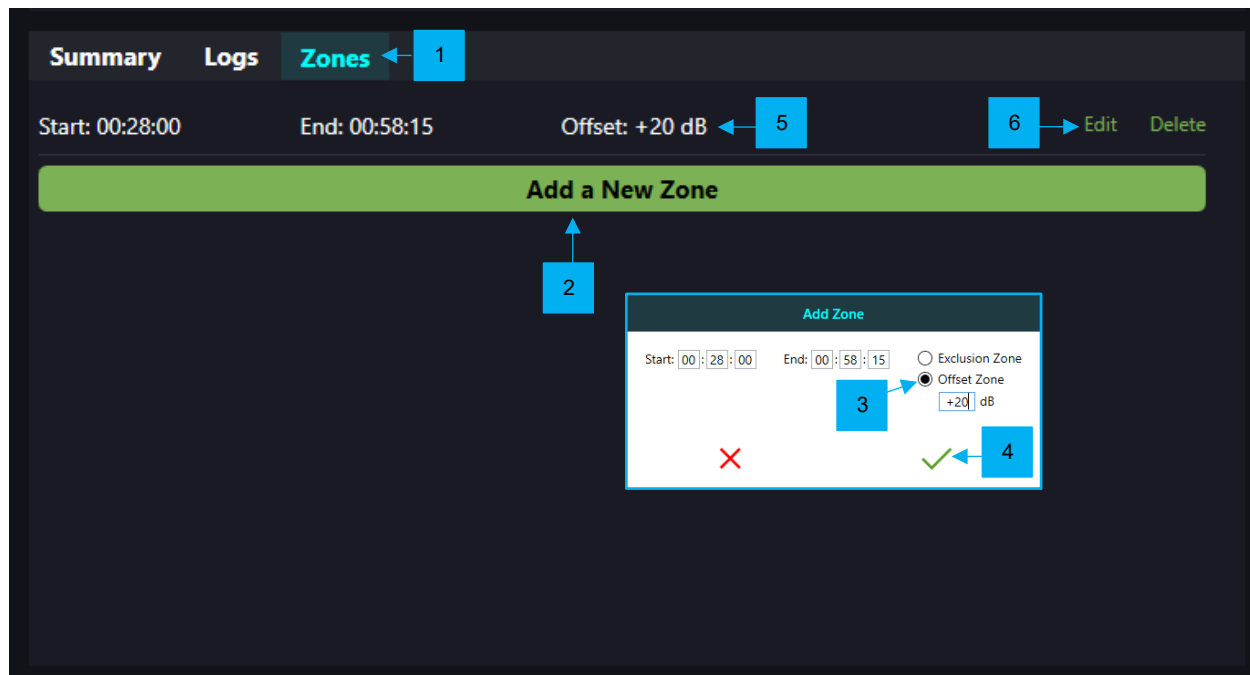


Figure 14. Add a New Zone

1. Click on Zones.
2. Click on Add a New Zone.
3. In the Add Zone window, select Exclusion Zone or Offset Zone and enter desired Start and End times (and +/- dB value if adding Offset Zone).
4. Click on the check mark to save the zone.
5. The zone is listed under the Zones tab and displayed in the Logs graph (see Figure 15). Modified run time is shown. Both the original and modified data summaries will be displayed in the Summary tab and one or both can be exported to the summary report. See Figure 11 and Appendix B.

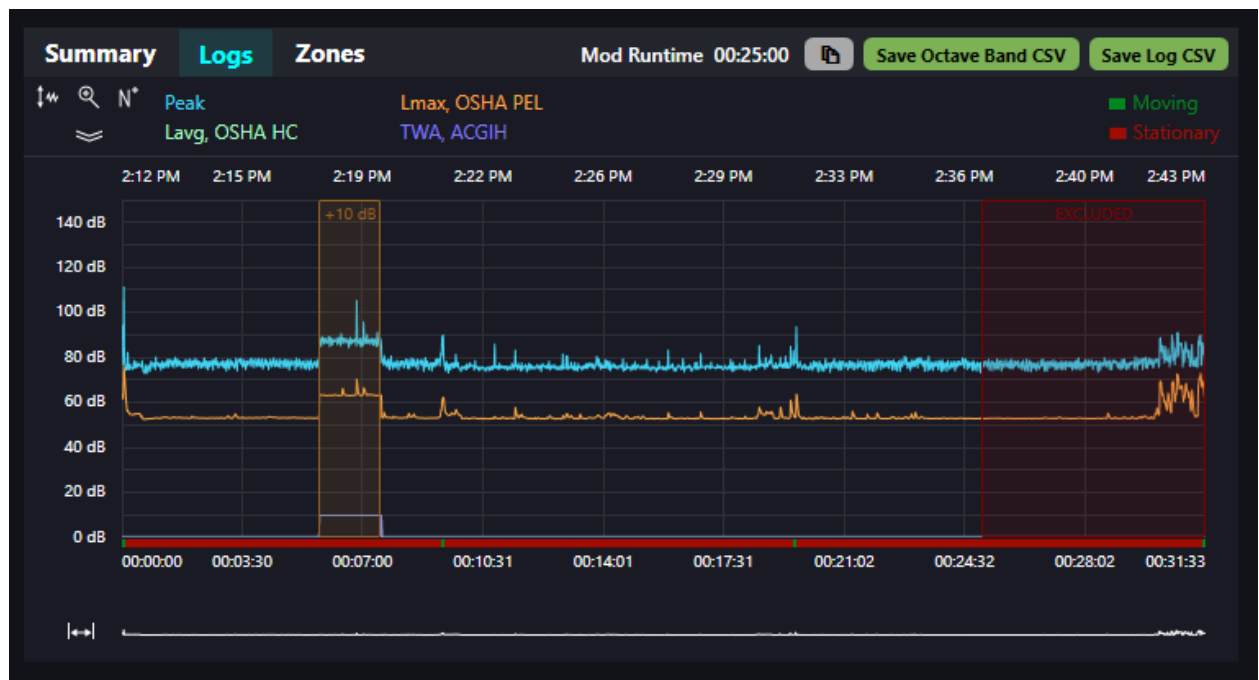


Figure 15. Zone Displayed in Logs Graph

6. Select Edit or Delete as needed and edit details or delete zone and click on check mark to save as shown below.

Edit Zone

Start:  End:

☐ Exclusion Zone  
☒ Offset Zone  
 dB

✗
✓

Delete zone?

Delete this zone?

✗
✓

## SOFTWARE NOTES

Version	What's New
<b>V.1.0.15 or earlier</b>	- No ability to add zones
<b>V.2.0.0</b>	- Added zones, enhanced graphing and report features (zones can be added only if data is collected using NoiseCHEK running firmware V.2.0.0 or later version). DataTrac dB V.1.0.15 or earlier will not be able to download data from dosimeter with V.2.0.0 or later firmware. Includes firmware V.2.0.0.
<b>V.2.0.1</b>	- Fixed timeout issues when downloading data from dosimeter with completely filled memory. Displays version number in title bar. Includes firmware V2.0.1, which adds the ability to indicate last factory calibration date (LFC) on the Info screen.
<b>V.2.0.2</b>	- Added ability to set time for pTWA and pDose (requires firmware V.2.0.2) and to share data with DataTrac dB on different PCs. Includes firmware V.2.0.2.
<b>V.2.0.3</b>	- Fixes order of dosimeters on dock and issues with report title. Includes firmware V.2.0.3.
<b>V.2.0.4</b>	- Added Connected devices menu with options to upload settings/schedule to and download history from all connected devices. Improves connectivity to PC. Includes firmware V.2.0.4.
<b>V.2.0.5</b>	- Added ability to export summary report in Word format (.docx).
<b>V.2.0.6</b>	- Added ability to combine two or more runs in exported report; in modified log graphs, displays modified run time.
<b>V.2.0.7</b>	- Fixed minor bugs.
<b>V.2.0.8</b>	- Added lifetime run time (LRT) on Info screen and ability in Create Report to select readings shown in summary report.

## APPENDICES

### Appendix A

#### SKC End-user License Agreement

**NOTICE TO USER:** This is a contract. By installing this software, you accept all the terms and conditions of this End-user License Agreement (EULA). If you do not agree with the terms and conditions shown below, do not install the software.

**GENERAL TERMS AND CONDITIONS** - This software (the "SOFTWARE") is owned by SKC Inc. ("SKC") and protected by copyright law. SKC gives the user (the "USER") certain rights to use the SOFTWARE after acceptance of the terms and conditions of this EULA.

The USER may:

- Use the SOFTWARE on more than one computer.

The USER may not:

- Use the SOFTWARE with improperly licensed SOFTWARE. The SOFTWARE must be supported by properly licensed SOFTWARE.
- Reverse engineer, decompile, disassemble, modify, translate, make any attempt to discover the source code, or otherwise plagiarize the SOFTWARE.

**LIMITED WARRANTY** - SKC does not warrant that the SOFTWARE will meet your requirements or that the SOFTWARE is error-free.

THE WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

**DISCLAIMER OF DAMAGES** - USER SHALL NOT BE ENTITLED TO RECOVER FROM SKC INC. ANY CONSEQUENTIAL DAMAGES, DAMAGES FROM USE OF THE SOFTWARE WITH IMPROPERLY LICENSED SOFTWARE, DAMAGES TO PROPERTY, DAMAGES FOR LOSS OF USE, LOSS OF TIME, LOSS OF PROFITS, INCOME, DATA OR OTHER INCIDENTAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE. SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES TO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

#### EXPORT CONTROLS

NONE OF THE SOFTWARE OR UNDERLYING INFORMATION OR TECHNOLOGY MAY BE DOWNLOADED OR OTHERWISE EXPORTED OR RE-EXPORTED (I) INTO (OR TO A NATIONAL OF) ANY COUNTRY TO WHICH THE U.S. HAS EMBARGOED GOODS; OR (II) TO ANYONE ON THE U.S. TREASURY DEPARTMENT'S LIST OF SPECIALLY DESIGNATED NATIONALS OR THE U.S. COMMERCE DEPARTMENT'S TABLE OF DENY ORDERS. BY DOWNLOADING OR USING THE SOFTWARE, YOU ARE AGREEING TO THE FOREGOING AND YOU ARE REPRESENTING AND WARRANTING THAT YOU ARE NOT LOCATED IN, UNDER CONTROL OF, OR A NATIONAL OR RESIDENT OF ANY SUCH COUNTRY OR ON ANY SUCH LIST.

**U.S. GOVERNMENT END USERS** - THIS EULA CONVEYS ONLY RESTRICTED RIGHTS, AND ITS USE, DISCLOSURE, AND DUPLICATION ARE SUBJECT TO FAR 52.227-7013(C)(1)(II).

**GOVERNING LAW AND GENERAL PROVISIONS** - THIS EULA SHALL BE CONSTRUED UNDER THE LAWS OF THE COMMONWEALTH OF PENNSYLVANIA WHICH SHALL BE DEEMED TO BE THE SITUS OF THE EULA WITH SKC. THIS EULA WILL NOT BE GOVERNED BY THE UNITED NATIONS CONVENTION OR CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS, THE APPLICATION OF WHICH IS EXPRESSLY EXCLUDED. IF ANY PART OF THIS EULA IS FOUND VOID AND UNENFORCEABLE, IT WILL NOT AFFECT THE VALIDITY OF THE BALANCE OF THE EULA, WHICH SHALL REMAIN VALID AND ENFORCEABLE ACCORDING TO ITS TERMS. THE USER AGREES THAT THE SOFTWARE WILL NOT BE SHIPPED, TRANSFERRED OR EXPORTED INTO ANY COUNTRY OR USED IN ANY MANNER PROHIBITED BY THE U.S. EXPORT ADMINISTRATION ACT OR ANY OTHER EXPORT LAWS, RESTRICTIONS OR REGULATIONS. NO OTHER RIGHT IS GIVEN BY SKC IN CONJUNCTION WITH THIS EULA.

## Appendix B: Sample Summary Report



### NoiseCHEK Noise Dosimeter

NoiseCHEK 2149 SN: 202149

Sample date: 3/29/2022 10:02:56 AM

Company: SKC

Sample Manager: PLE

Calibrator Model & SN: 703-002 SN XXXX

#### Device Setup

##### OSHA - HC

Response	Slow
Threshold	80
Upper Limit	115
Exchange Rate	5
Criterion Level	90
RMS Weighting	A

##### OSHA - PEL

Response	Slow
Threshold	90
Upper Limit	115
Exchange Rate	5
Criterion Level	90
RMS Weighting	A

##### MSHA - HC

Response	Slow
Threshold	80
Upper Limit	117
Exchange Rate	5
Criterion Level	90
RMS Weighting	A

#### Measurement Summary Information


Pre Calibration: 1 kHz @ 114 dB, 3/29/2022 10:02:22 AM

Run Started: 3/29/2022 10:02:56 AM

Run Ended: 3/29/2022 11:52:12 AM

Total Runtime: 01:49:15

Post Calibration: +0.3 dB, 3/29/2022 11:52:28 AM

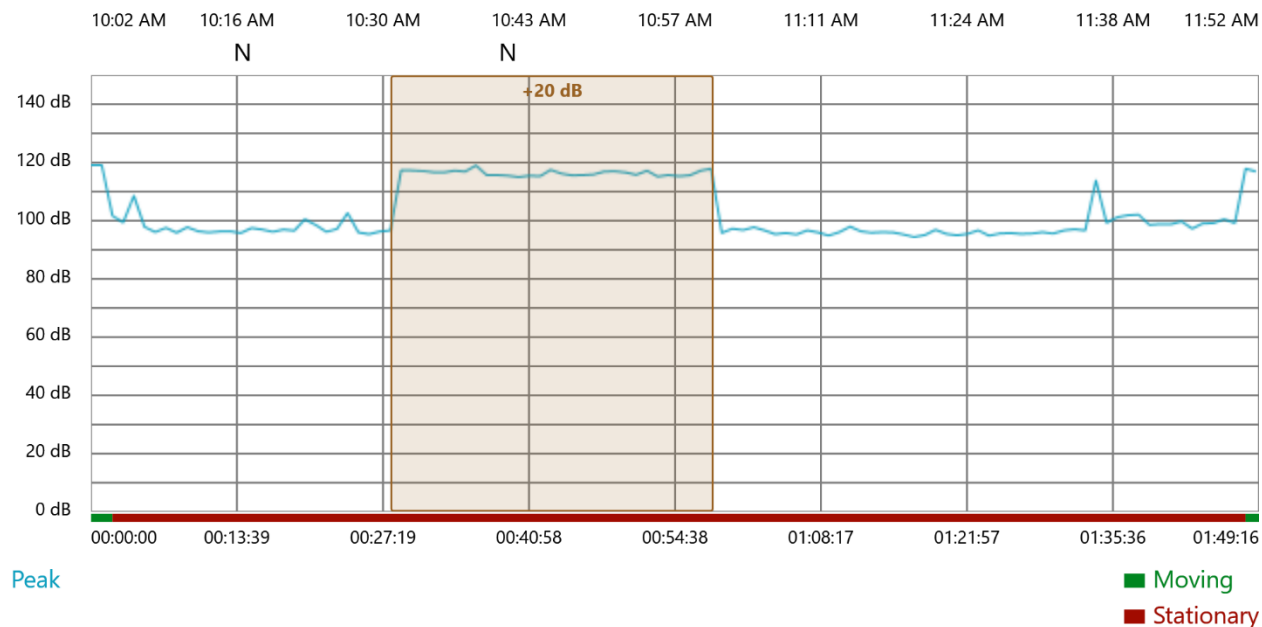

## Modified Summary

⚠ Data has been modified

Total Runtime: 01:49:00

OSHA - HC		OSHA - PEL		MSHA - HC	
TWA	60.5 dBA	TWA	51.8 dBA	TWA	60.5 dBA
Dose	1.7%	Dose	0.5%	Dose	1.7%
Lavg	71.2 dBA	Lavg	62.5 dBA	Lavg	71.2 dBA
Lmax	106.8 dBA	Lmax	106.8 dBA	Lmax	106.8 dBA
Lmin	25.4 dBA	Lmin	25.4 dBA	Lmin	25.4 dBA
Peak	119.1 dB	Peak	119.1 dB	Peak	119.1 dB
Exposure	0.8 Pa <sup>2</sup> -h	Exposure	0.8 Pa <sup>2</sup> -h	Exposure	0.8 Pa <sup>2</sup> -h
ULT	00:00:00	ULT	00:00:00	ULT	00:00:00
SEL	128.6 dBA	SEL	128.6 dBA	SEL	128.6 dBA
pTWA	71.2 dBA	pTWA	62.5 dBA	pTWA	71.2 dBA
pDose	7.4%	pDose	2.2%	pDose	7.4%
C-A	6.7 dB	C-A	1.5 dB	C-A	6.7 dB
LEP,d	84.0 dBA	LEP,d	84.0 dBA	LEP,d	84.0 dBA
LEX,8h	84.0 dBA	LEX,8h	84.0 dBA	LEX,8h	84.0 dBA
Exp. Pts.	1.7	Exp. Pts.	0.5	Exp. Pts.	1.7
Exp. Pts/h	3.1	Exp. Pts/h	0.9	Exp. Pts/h	3.1
CUL	0	CUL	0	CUL	0

## Original Summary

OSHA - HC		OSHA - PEL		MSHA - HC	
TWA	57.9 dBA	TWA	51.8 dBA	TWA	57.9 dBA
Dose	1.2%	Dose	0.5%	Dose	1.2%
Lavg	68.6 dBA	Lavg	62.5 dBA	Lavg	68.6 dBA
Lmax	106.8 dBA	Lmax	106.8 dBA	Lmax	106.8 dBA
Lmin	25.4 dBA	Lmin	25.4 dBA	Lmin	25.4 dBA
Peak	119.1 dB	Peak	119.1 dB	Peak	119.1 dB
Exposure	0.1 Pa <sup>2</sup> -h	Exposure	0.1 Pa <sup>2</sup> -h	Exposure	0.1 Pa <sup>2</sup> -h
ULT	00:00:00	ULT	00:00:00	ULT	00:00:00
SEL	118.3 dBA	SEL	118.3 dBA	SEL	118.3 dBA
pTWA	68.6 dBA	pTWA	62.5 dBA	pTWA	68.6 dBA
pDose	5.2%	pDose	2.2%	pDose	5.2%
C-A	4.5 dB	C-A	1.5 dB	C-A	4.5 dB
LEP,d	73.7 dBA	LEP,d	73.7 dBA	LEP,d	73.7 dBA
LEX,8h	73.7 dBA	LEX,8h	73.7 dBA	LEX,8h	73.7 dBA
Exp. Pts.	1.2	Exp. Pts.	0.5	Exp. Pts.	1.2
Exp. Pts/h	2.1	Exp. Pts/h	0.9	Exp. Pts/h	2.1
CUL	0	CUL	0	CUL	0

## Measurement Event Details

Auto-threshold Audio Capture at 3/29/2022 10:03:38 AM

Text note added at 3/29/2022 10:17:57 AM  
aBC

Text note added at 3/29/2022 10:42:46 AM  
abc

Auto-threshold Audio Capture at 3/29/2022 11:36:38 AM

Auto-threshold Audio Capture at 3/29/2022 11:50:39 AM

Text note added at 4/13/2022 11:02:05 AM  
fjalksdjfalksdjfkads



## Appendix C: Sample Log Data Imported into Microsoft Excel

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W
1	Timestamp	Run Time	Overload	Motion	Peak	TWA 1	Dose 1	Lavg 1	Leq 1	Exposure	Lmax 1	Lmin 1	SEL 1	pTWA 1	pDose 1	C-A 1	Lepd 1	Lex 1	Exposure	Exposure	TWA 2	Dose 2	Lavg 2
2	3/29/2022 10:03	0:01:00	0	1	119.1	46.9	0.255419	91.5	95.4	0.022863	106.8	25.4	113.1	91.5	122.6	1.8	68.5	68.5	0.3	0	45.6	0.211945	9
3	3/29/2022 10:04	0:02:00	0	0	101.7	33.4	0.039119	77.9	81.1	0.000855	88.3	66.7	98.9	77.9	18.8	2.2	54.3	54.3	0	0	0	0	0
4	3/29/2022 10:05	0:03:00	0	0	99.4	30.4	0.02592	75	79.8	0.000635	83.4	73.5	97.6	75	12.4	4.9	53	53	0	0	0	0	0
5	3/29/2022 10:06	0:04:00	0	0	108.6	32.4	0.03402	76.9	82.2	0.001116	94.7	67.6	100	76.9	16.3	1.9	55.4	55.4	0	0	25.4	0.0129	6
6	3/29/2022 10:07	0:05:00	0	0	97.9	0	0	0	75.9	0.000261	79.9	72.3	93.7	0	0	56.7	49.1	49.1	0	0	0	0	0
7	3/29/2022 10:08	0:06:00	0	0	96.1	0	0	0	75.8	0.000254	80	71.3	93.6	0	0	61.3	49	49	0	0	0	0	0
8	3/29/2022 10:09	0:07:00	0	0	97.6	12.8	0.002262	57.4	74.2	0.000177	82.8	66.6	92	57.4	1.1	8.7	47.4	47.4	0	0	0	0	0
9	3/29/2022 10:10	0:08:00	0	0	95.9	8.1	0.001176	52.7	76	0.000264	80.7	69	93.8	52.7	0.6	15.3	49.2	49.2	0	0	0	0	0
10	3/29/2022 10:11	0:09:00	0	0	97.8	19.4	0.005612	63.9	77.2	0.000349	82	69.9	95	63.9	2.7	10.2	50.4	50.4	0	0	0	0	0
11	3/29/2022 10:12	0:10:00	0	0	96.4	14.5	0.002835	59	77.1	0.000341	80.9	67	94.9	59	1.4	12.3	50.3	50.3	0	0	0	0	0
12	3/29/2022 10:13	0:11:00	0	0	96	0	0	0	75.1	0.000213	79.7	69.4	92.8	0	0	61	48.2	48.2	0	0	0	0	0
13	3/29/2022 10:14	0:12:00	0	0	96.3	6.5	0.000944	51.1	76.6	0.000306	80.4	68.1	94.4	51.1	0.5	15.9	49.8	49.8	0	0	0	0	0
14	3/29/2022 10:15	0:13:00	0	0	96.4	0	0	0	75.6	0.00024	79.1	67.9	93.4	0	0	66.7	48.8	48.8	0	0	0	0	0
15	3/29/2022 10:16	0:14:00	0	0	95.8	16.9	0.003984	61.5	77.5	0.000373	80.6	71.9	95.3	61.5	1.9	12.6	50.7	50.7	0	0	0	0	0
16	3/29/2022 10:17	0:15:00	0	0	97.5	15.8	0.003387	60.3	77.5	0.000378	80.8	71.4	95.3	60.3	1.6	15.3	50.7	50.7	0	0	0	0	0
17	3/29/2022 10:18	0:16:00	0	0	97	8.8	0.001291	53.3	74.5	0.00019	80.8	67.1	92.3	53.3	0.6	14.8	47.7	47.7	0	0	0	0	0
18	3/29/2022 10:19	0:17:00	0	0	96.2	14.2	0.002729	58.7	76.1	0.000274	82	70	93.9	58.7	1.3	8.4	49.3	49.3	0	0	0	0	0
19	3/29/2022 10:20	0:18:00	0	0	97	15.6	0.003306	60.1	76.3	0.000285	82	69.3	94.1	60.1	1.6	8.5	49.5	49.5	0	0	0	0	0
20	3/29/2022 10:21	0:19:00	0	0	96.6	15.4	0.003211	59.9	76.4	0.000292	82.2	67	94.2	59.9	1.5	6.9	49.6	49.6	0	0	0	0	0
21	3/29/2022 10:22	0:20:00	0	0	100.5	0	0	0	75.6	0.000241	79.1	72.3	93.4	0	0	61.5	48.8	48.8	0	0	0	0	0
22	3/29/2022 10:23	0:21:00	0	0	98.6	0	0	0	75.5	0.000236	79.1	67.9	93.3	0	0	58.4	48.7	48.7	0	0	0	0	0
23	3/29/2022 10:24	0:22:00	0	0	96.2	5.5	0.000817	50	76.6	0.000303	80.6	70.2	94.4	50	0.4	20.9	49.8	49.8	0	0	0	0	0
24	3/29/2022 10:25	0:23:00	0	0	97.2	0	0	0	76.9	0.000327	80	70.5	94.7	0	0	71.7	50.1	50.1	0	0	0	0	0
25	3/29/2022 10:26	0:24:00	0	0	102.7	0	0	0	74.6	0.000192	79.6	68.4	92.4	0	0	62	47.8	47.8	0	0	0	0	0
26	3/29/2022 10:27	0:25:00	0	0	96	0	0	0	75	0.000211	79.4	71.6	92.8	0	0	61.6	48.2	48.2	0	0	0	0	0
27	3/29/2022 10:28	0:26:00	0	0	95.4	0	0	0	74.9	0.000207	79.7	66.8	92.7	0	0	63.5	48.1	48.1	0	0	0	0	0
28	3/29/2022 10:29	0:27:00	0	0	96.3	0	0	0	75.4	0.000233	78.8	70.7	93.2	0	0	61.9	48.6	48.6	0	0	0	0	0
29	3/29/2022 10:30	0:28:00	0	0	96.7	3.5	0.000622	48.1	77.5	0.000377	80.4	72.7	95.3	48.1	0.3	25.7	50.7	50.7	0	0	0	0	0
30	3/29/2022 10:31	0:29:00	0	0	97.3	18.5	0.004986	63.1	76.3	0.000286	82	68	94.1	63.1	2.4	7.9	49.5	49.5	0	0	0	0	0
31	3/29/2022 10:32	0:30:00	0	0	97.3	12.6	0.002185	57.1	76.4	0.00029	80.8	67.2	94.2	57.1	1	16	49.6	49.6	0	0	0	0	0
32	3/29/2022 10:33	0:31:00	0	0	97.1	18.1	0.004721	62.7	76.8	0.000319	82.1	71	94.6	62.7	2.3	7.9	50	50	0	0	0	0	0
33	3/29/2022 10:34	0:32:00	0	0	96.7	0	0	0	75.1	0.000213	79.2	67.8	92.8	0	0	64.8	48.2	48.2	0	0	0	0	0
34	3/29/2022 10:35	0:33:00	0	0	96.6	0	0	0	75.9	0.00026	78.6	68.5	93.7	0	0	48	49.1	49.1	0	0	0	0	0
35	3/29/2022 10:36	0:34:00	0	0	97.2	0	0	0	73.2	0.000141	79.7	66.8	91	0	0	63.9	46.4	46.4	0	0	0	0	0

## GLOSSARY OF NOISE TERMS

**Average Sound Level (Lavg)** – The average sound level measured over the specific time period using the chosen exchange rate. Only sound level above the threshold is included.

Lavg = Leq (equivalent continuous level) when the exchange rate is 3 dB

Lavg = L<sub>OSHA</sub> when the exchange rate is 5 dB

**C-A** – The A-weighted average sound level subtracted from the C-weighted average sound level (LCavg - LAavg).

**Continuous Upper Limit (CUL)** – The number of times the set upper limit was exceeded continuously for the set time interval. Any continuous event lasting for the set interval counts as one.

**Criterion Level** – Sound level required to produce 100% dose if continually applied for the criterion time (usually 8 hours). The current OSHA and MSHA criterion level is 90 dB; the ACGIH criterion level is 85 dB.

**Daily Noise Exposure (LEX,8h)** – The same as LEP,d (see below), used to assess a worker's noise exposure during an 8-hour workday.

**Daily Personal Noise Exposure (LEP,d)** – A-weighted noise level during a nominal 8-hour workday. Used to assess a worker's noise exposure during an 8-hour workday.

**Dose (D)** – The exposure to occupational noise expressed as a percentage of the allowable daily noise exposure. Exposure above 100% represents exposures that are hazardous.

**Equivalent Continuous Level (Leq)** – The sound level having the same overall energy as the fluctuating sound level over a given period of time.

**Exchange Rate** – An increment of decibels (dB) that requires the halving of exposure time. For example, a 5-dB exchange rate requires that exposure time be halved for each 5-dB increase.

**Frequency Weighting** –

A-weighting corresponds to the human ear response

C-weighting correlates with the human response to high noise levels

Z-weighting is unweighted “zero” frequency weighting

**Maximum Sound Level (Lmax)** – The highest value of the frequency and time-weighted sound levels measured over the specific time period.

**Minimum Sound Level (Lmin)** – The lowest value of the frequency and time-weighted sound levels measured over the specific time period.

**Noise Dose (D)** – See Dose.

**Noise Exposure Points (Exposure Pt)** – Point system based on Health and Safety Executive guidance and used mainly in the UK to assess daily personal noise exposure.

**Noise Exposure Points per Hour (Exposure Pt/Hr)** – Exposure points per hour.

**Peak** – The highest instantaneous sound pressure level of a selected frequency-weighted sound pressure level during the stated time interval.

**Projected Dose (pDose)** – The projected exposure to occupational noise assuming that the current exposure continues for the remaining duration of the work shift.

**Projected Time Weighted Average (pTWA)** – The projected exposure to occupational noise assuming the current noise exposure continues for the remaining duration of the work shift.

**Response (Time Weighting)** – Sound pressure level (SPL) averaging time interval, 125 milliseconds for FAST response, 1 second for SLOW response.

**Sound Exposure (E)** – The sound pressure measured during a stated time interval.

**Sound Exposure Level (SEL)** – The sound level having the same overall energy as the fluctuating sound level during a 1-second time interval.

**Sound Pressure (SP)** – A pressure caused by a sound wave passing through the air or other gaseous or liquid medium. The sensation of hearing is the result of fluctuation in atmospheric pressure initiated by a passing sound wave. Sound pressure is measured in Pa or N/m<sup>2</sup>.

**Sound Pressure Level (SPL)** – The ratio of actual sound pressure (P) to the reference sound pressure (P<sub>0</sub>). SPL uses logarithmic scale to represent a wide range of human hearing and is measured in decibels (dB),  $SPL = 20\log(P/P_0)$  dB. The reference sound level is the typical threshold of human hearing, P<sub>0</sub> = 20 mPa (2X10<sup>-5</sup> Pa).

**Threshold Level** – The A-weighted sound level. Only values above this level are included in noise dose accumulation.

**Time-weighted Average (TWA)** – Daily exposure to occupational noise normalized to an 8-hour workday. TWA takes into account the average levels of noise and the time spent in each exposure area. Different agencies use different exchange rates and threshold levels to calculate TWA.

**Upper Limit (UL)** – The cumulative time that the noise level exceeded the set level.