



Operating Instructions

863 Valley View Road, Eighty Four, PA 15330 USA
Tel: 724-941-9701 • www.skcinc.com


Carpet Sampling Cassette Kit Cat. No. 225-9540

Sample carpet for indoor contaminants such as molds, pollens, and dust mites. Each kit includes Carpet Cassette with disposable template, Luer adapter, zip bag, and label.

Sampling

Review pump operating instructions before sampling.

1. Calibrate the pump to 10 L/min. Detach the flowmeter once desired flow rate is set.
2. Remove the red plugs from a Carpet Cassette.
3. Insert the tubing adapter Luer into the tubing. Connect the cassette to the adapter.
4. Place the supplied paper template flat on the area to be sampled.

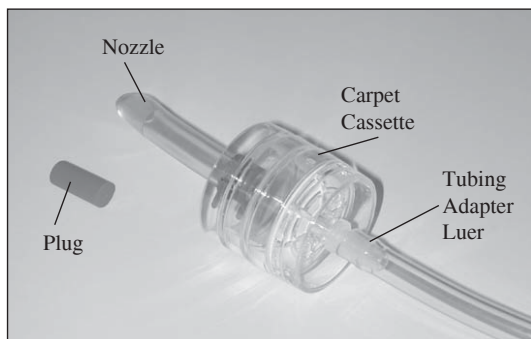

Note: It is recommended that you select a place away from major traffic, but not under furniture.

5. Turn on the pump and begin "vacuuming" the entire area within the template using a back and forth side-to-side motion. Then repeat vacuuming in an up and down cross direction. Vacuum as deeply into the pile as possible.



6. After the desired sample has been taken, replace the red plugs on the cassette and send to an environmental microbial laboratory for analysis.

Description			Cat. No.
Carpet Sampling Cassette Kit include 10 each: microvacuum carpet cassettes (Cat. No. 225-9542), 10 x 10-cm disposable templates, Luer adapters, zip bags, and labels			225-9540
Microvacuum Carpet Sampling Cassette , 37-mm, 0.4-µm polycarbonate filter in banded styrene cassette with microvacuum nozzle			225-9542
Accessory			
Templates	Disposable manila paper, 10 x 10 cm	pk/250	225-2415
		pk/10	225-2415A

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to <http://www.skcinc.com/warranty>.

www.skcinc.com