



Operating Instructions
SKC Deployable Particulate
Sampler (DPS) System



SKC Inc.
863 Valley View Road
Eighty Four, PA 15330

Form 38044 Rev 220112

DPS System Quick Guide

Media Preparation and Installation

1. Prepare impaction discs and filters.
2. Disassemble impactor.
3. Insert collection filter in filter cassette.
4. Press prepared impaction disc into top of filter cassette.
5. Reinsert filter cassette in impactor.
6. Reassemble impactor.

Sampling Setup and Calibration

1. Set up sample pump. Set pump flow rate to 10 L/min. (*See Leland Legacy Quick Guide on page 10. For advanced programming, see Leland Legacy Operating Instructions.*)
2. Screw calibration adapter onto impactor.
3. Use tubing with quick-connect to attach pump inlet to outlet of impactor. Use short tubing to connect inlet of calibration adapter to outlet of flowmeter or calibrator to form a calibration train. **Note:** *If using SKC High Flow chek-mate Calibrator, Pulsation Dampener Cat. No. 375-150 is required in line between calibration adapter inlet and calibrator outlet. See Accessories.* Calibrate pump flow rate with flowmeter. Record the flow rate. Reset accumulated data if required.
4. Disconnect flowmeter or calibrator and remove calibration adapter from impactor. Remove calibration media and place new unexposed media in impactor if required.
5. Mount bracket at desired location.
6. Screw impactor onto mounting bracket.
7. Screw rain cover onto impactor.

Sampling

1. Turn on pump and record pertinent data. (*Leland Legacy pump may be started manually or automatically, see Quick Guide on page 10.*)
2. Turn off pump after desired sample time has elapsed. Record pertinent information.
3. Remove rain cover, reinstate calibration train, and verify pump flow rate.

Sample Removal

1. Use quick-connect to detach tubing from pump.
2. Disassemble impactor.
3. Remove impaction disc.
4. Remove filter cassette, disassemble, and remove collection filter.
5. Place collection filter in appropriate container for shipping.

Table of Contents

Introduction.....	1
Performance Profile.....	2
Principle of Operation.....	3
Media Preparation	4
Impactor Preparation.....	4
Cleaning.....	4
O-ring Care.....	4
Inserting a Collection Filter into the IMPACT Sampler.....	5
Inserting an Impaction Disc into the IMPACT Sampler.....	6
Sample Pump Operation.....	7
Charging the Battery.....	7
Reading the Charging Status LED.....	8
Battery Setup.....	8
Battery Replacement.....	9
Leland Legacy Quick Guide.....	10
Calibration and Sampling.....	11
Calibration.....	11
Sampling.....	12
Sample Removal, Shipping, and Analysis.....	13
Removing the Collection Filter and Impaction Disc.....	13
Shipping Samples.....	13
Analysis.....	13
Ordering Information.....	14
Li-Ion Battery Shipment.....	16
Warranty.....	16



Indicates a reminder or note




Indicates a warning or caution

INTRODUCTION

The SKC DPS System is a compact, portable, battery-operated, and cost-effective particulate sampling system that ensures the ability to monitor particulate matter (PM) in indoor and outdoor environments and in urban, industrial, or rural settings. The system features the fully programmable constant flow Leland Legacy® Sample Pump, the IMPACT Sampler, and other equipment needed for effective ambient PM10 or PM2.5 sampling. All components are packaged in an easily carried heavy-duty Pelican® case from which the system operates.

The heart of the DPS System is the patented* IMPACT Sampler. This inertial impactor is designed to remove particles larger than a specific cut-point (2.5 µm or 10 µm) by capturing them on a disposable oiled impaction disc that reduces particle bounce. Particles smaller than the cut-point are collected on a 47-mm filter. The IMPACT Sampler mounts easily and makes media changes fast and simple with its convenient removable filter cassette and opener.

* U.S. Patent No. 7,334,453

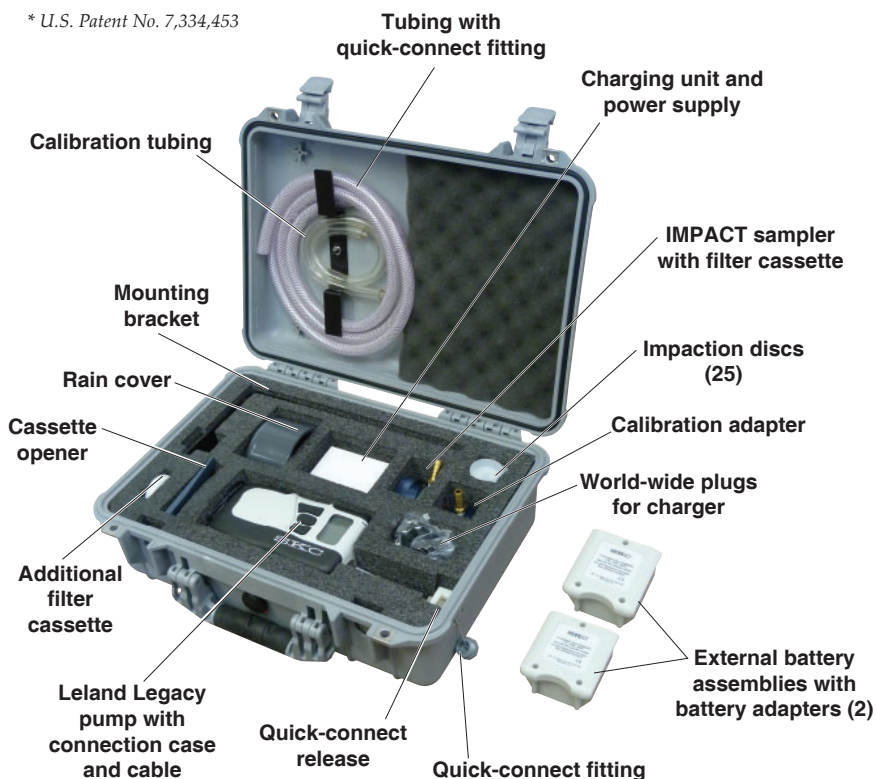

The SKC DPS System includes a Leland Legacy Sample Pump with connection case and charger (100-240 V), IMPACT sampling head, 2 filter cassettes, calibration adapter, rain cover for sampling head, 25 disposable impaction discs, filter cassette opener, tubing with quick-connect fitting, calibration tubing, and mounting bracket in a heavy-duty lockable carry case. Two external battery assemblies with adapters are packaged separately. A flowmeter is available in models Cat. Nos. 100-3900 and 100-3902 only.

PERFORMANCE PROFILE

Flow Rate:	10 L/min
50% Cut-point:	10 µm or 2.5 µm
Run Time:	> 24 hours on one battery charge
Power:	Rechargeable lithium-ion (Li-Ion) battery, 7.4 V, 12-Ah capacity†, 88.8 Wh
Battery Recharge Time:	15 hrs
Impaction Discs:	<ul style="list-style-type: none">• Recommended impaction disc to reduce particle bounce: 37-mm disposable pre-oiled porous plastic disc (supplied with DPS System)• For chemical analysis of larger particles: 37-mm filter (quartz or PTFE§)
Collection Filter:	47-mm quartz or PTFE§ with support ring
Analysis:	Gravimetric and/or chemical
Tubing:	3/8-in ID reinforced flexible PVC (supplied)
Temperature:	Charging: 32 to 113 F (0 to 45 C) Storing: -4 to 95 F (-20 to 35 C) Operating: 32 to 113 F (0 to 45 C)
Operating Humidity:	0 to 95% non-condensing
Altitude:	Do not use pump beyond 7500 ft.
RFI/EMI Shielding:	CE marked
Case Dimensions:	18.5 x 14.1 x 6.9 in (47 x 36 x 18 cm)
Complete System Weight:	13 lbs (5.9 kg)
Sampling Head (Impactor) Dimensions:	2.6 dia. X 1.8 H x 3.8 L in (7 x 5 x 10 cm)
Sampling Head (Impactor) Weight:	0.5 lb (0.23 kg)

Note: The DPS System provides data similar to data from Federal Reference Method samplers. The DPS System is not a U.S. EPA reference or equivalent method for compliance sampling.

† DPS Systems contain Leland Legacy pumps with Li-Ion batteries and may be subject to special shipping regulations.

§ Back pressure on PTFE filters can vary within the same lot.



Use in non-explosive environments only. Not intrinsically safe


PRINCIPLE OF OPERATION

A sample pump draws particle-laden air at a flow rate of 10 L/min through an inertial impactor to separate airborne particles according to aerodynamic diameter. Particles enter the impactor through eight nozzles on top of the sampler. The inlet nozzles are sized to operate at a 10 L/min flow rate causing eight airjets to impinge onto the impaction disc positioned below the inlet nozzles. Particles larger than the sampler cut-point with enough inertia to cross the airstream lines impact on the impaction disc. The airflow, containing smaller particles, makes a sharp turn, passes through the openings in the top of the filter cassette, and follows through to a 47-mm filter where the smaller particles collect.

The top of the filter cassette accommodates the impaction disc. For optimum impactor performance, a 37-mm oiled porous plastic disc is recommended as disposable collection substrate (supplied with system). If chemical analysis of larger particles is desired, a 37-mm filter (quartz or PTFE) may be used.



IMPACT Sampler and Leland Legacy Sample Pump - the two main components of the DPS System

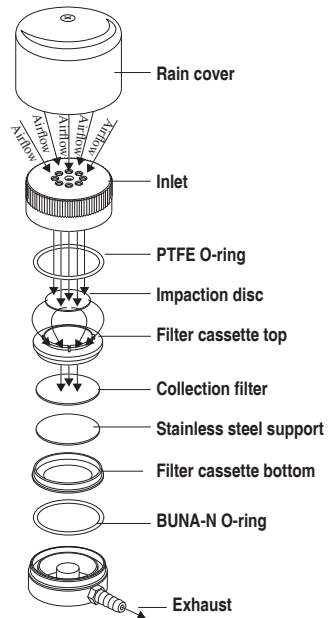

Exploded view of IMPACT Sampler

MEDIA PREPARATION

Collection Filters: Equilibrate and pre-weigh filters in a clean environment according to appropriate procedures. Record the weight as the pre-sample weight.

Impaction Disc: *Ready-to-use pre-oiled disposable plastic impaction discs are included with the system (qty. 25). Replacement pre-oiled plastic discs are available as SKC Cat. Nos. 225-395 (qty. 25) and 225-395A (qty. 50). Using an oiled impaction disc reduces particle bounce.*

37-mm filters (quartz or PTFE) may be used if chemical analysis of larger particles is desired.

IMPACTOR PREPARATION

Cleaning

For optimum performance, the IMPACT Sampler inlet, exhaust, and filter cassette should be cleaned after five runs or upon a noticeable buildup of material. This will remove oil buildup from the top of the filter cassette and other residue built up from frequent sampling. Disassemble the impactor and wash parts in water with a liquid detergent or soap. Rinse and air dry all parts thoroughly in a clean environment.

 **Do not place any mechanical object in the inlet nozzles.**

O-ring Care

Visually inspect the condition of the BUNA-N exhaust O-ring (*see illustration on page 3 for location*). Ensure the O-ring surface is smooth (i.e., without cracks, cuts, or other damage). Ensure the O-ring is fitted properly in its channel. Replace the exhaust O-ring if there is apparent damage, stretching, or thinning. It is recommended that the PTFE inlet O-ring be replaced by the manufacturer only.

Inserting a Collection Filter into the IMPACT Sampler

The IMPACT Sampler will arrive already assembled. Disassemble it to insert collection filter.



1 Unscrew inlet from exhaust.



2 Remove filter cassette.



3a. Use the filter cassette opener to open filter cassette.

3b. Slide the filter cassette horizontally into the "U" of the opener until the two halves of the cassette loosen. Gently pull halves apart.



4 Ensure the stainless steel support screen is in place in the bottom of the filter cassette.



5 Using forceps, place a preweighed 47-mm filter on the support screen.



6 Press filter cassette top into filter cassette bottom.



7 Reinsert cassette into impactor.

Technical Tidbit

- Use forceps to carefully insert and remove the collection filter. See *Accessories for forceps*.

Inserting an Impaction Disc into the IMPACT Sampler

For PM2.5 or PM10 sampling, insert an impaction disc only after a collection filter has been loaded into the filter cassette.

For PM2.5 or PM10, ensure a collection filter has been loaded into the filter cassette (see Inserting a Collection Filter into the IMPACT Sampler).

1



Place impaction disc in recessed area on filter cassette top. The rough side of the impaction disc should face up. SKC-supplied discs are stamped with "UP" on the appropriate side.



Place filter cassette on exhaust and screw impactor inlet and exhaust together just until tight. Further hand-tighten by 1/4 turn only.

! Keep sampler upright until the inlet is securely screwed onto the exhaust to prevent the impaction disc from being dislodged.

! Do not overtighten impactor inlet and exhaust. Do not use barbed fitting as leverage when tightening.

Technical Tidbits

- Install the rain cover (included with the DPS System) on the inlet of the IMPACT Sampler when sampling outdoors.
- SKC recommends using a new impaction disc for each sample.

SAMPLE PUMP OPERATION

The user may choose to operate the pump manually in the field (on/off), program a schedule into the pump manually, or program the pump for multiple schedules from a PC with optional DataTrac® for Leland Legacy Software (see *Ordering Information, Accessories*).

See page 10 for a Quick Guide for operating the SKC Leland Legacy Sample Pump. For advanced programming, see the complete Leland Legacy Pump Operating Instructions.



Charging the Battery

Completely charge a new battery pack using the SKC-approved charger (Cat. No. 223-241) before operating the pump. It may be necessary to charge the battery a few times before maximum battery capacity is achieved.




Cautions:

- Do not charge or operate pump with or without charger in hazardous locations.
- Use only the SKC-approved charger for this pump. Use of an unapproved charger may damage the battery and pump.
- Use of a non-approved charger voids any warranty.
- Do not open, disassemble, short circuit, crush, incinerate, or expose the battery to fire or high temperatures.
- Tampering with the battery pack voids any warranty.
- Ensure proper orientation of charging cable before plugging it into the charging jack. Improper orientation/contact will short-circuit the battery and voids any warranty.
- Short-circuiting the battery pack will render it immediately inoperative.
- Failure to follow warnings and cautions voids any warranty.




The battery pack may be kept on the SKC-approved charger for an indefinite time.

1. Insert the plug from the charging unit into the charging port on the battery adapter (on top of the external battery assembly).
2. Insert plug from power supply into the jack on the charging unit.
3. Install the appropriate wall plug on the power supply and plug power supply into a power outlet.

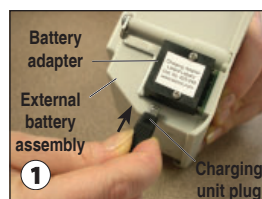

The battery will recharge in approximately 15 hours. For a complete charge, do not run the pump connected to the external battery assembly

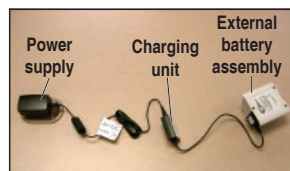

during charging. After charging is complete, disconnect battery from charger and connect pump to battery (see *Battery Setup*).




After charging the battery pack, it is good practice to run the pump for approximately 5 minutes before calibrating. This ensures the battery is in more steady-state conditions and improves the agreement in pre and post-sampling calibrations.

Reading the Charging Status LED

The Li-Ion Charging Unit indicates battery charge status via an LED on the unit that blinks in specific patterns. Observe the LED steadily for > 5 seconds to read charge status.



LED Action				Charge Status
ON * steady				Charge in progress
ON * 2 sec	OFF ○ .25 sec	ON * 2 sec	(Repeats)	Approximately 80% charged
OFF ○ 2 sec	ON * .25 sec	OFF ○ 2 sec	(Repeats)	Charge completed

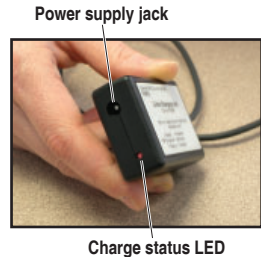

For more information on SKC pump batteries, go to www.skcinc.com/knowledgecenter.

Battery Setup

1. Insert the plug on connecting cable from pump into the jack on the battery adapter (on top of the external battery assembly).
2. Insert external battery assembly into a foam compartment in the case. Ensure there is no tension on the connecting cable.

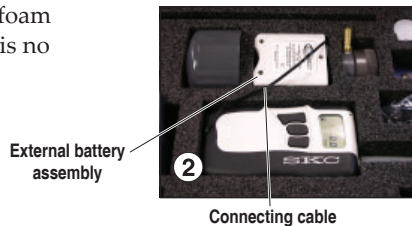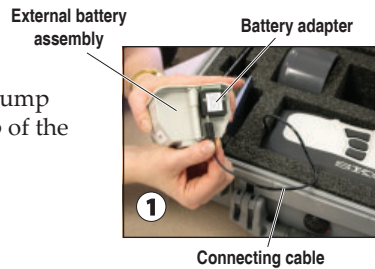

Battery Replacement

1. **Record all necessary data before unplugging pump from battery.**
2. Remove plug on connecting cable from jack on battery adapter (on top of the external battery assembly).
3. Insert plug on connecting cable into battery adapter jack on new, fully charged external battery assembly.
4. Insert external battery assembly into foam compartment in case. Ensure there is no tension on the connecting cable.

Leland Legacy Quick Guide

Terms »

Star button *

- Scrolls through run time data and Setup options

Up and down arrow buttons ▲▼

- Toggle between display choices and increase or decrease sampling parameters in Setup

Button sequence

▼ * = press buttons individually

[▲▼] = press simultaneously

▲▼ = security code, always press in sequence

Security code *▲▼*

- Prevents unauthorized changes to the pump's sampling program

Programming Sequences »

- **To activate pump (e.g., to change pump from Sleep to Hold):**

Press any button.

- **To change pump from Hold to Run or Run to Hold:**

Press [▲▼].

- **To reset accumulated data:**

Press [▲▼], then *▲▼*. Press * until *CLr* displays then press [▲▼]; press * until *End* displays then press [▲▼].

- **To set pump flow rate:**

Press [▲▼], then *▲▼*. Flow rate and SET flash. Press ▲ or ▼ to change flow rate. Press * until *End* appears then press [▲▼] to save setting and place pump in Hold.

- **To calibrate flow rate with standard calibrator:**

Press [▲▼], then *▲▼*. Flow rate and SET flash. Press ▲ or ▼ to change flow rate. Press * once. *ADJ* displays. Press ▲ or ▼ until desired flow rate is indicated on calibrator. When finished, press * until *End* displays then press [▲▼] to save new setting and place pump in *Hold*. For *CalChek Calibration*, see *operating instructions*.

- **To change temperature scale from F to C or C to F:**

Press [▲▼], then *▲▼*. Press * until temperature displays. Press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting.

- **To change atmospheric pressure scale (mm, mb, In):**

Press [▲▼], then *▲▼*. Press * until pressure displays then press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting.

- **To change time scale (12 Hr/24 Hr/Dela):**

Press [▲▼], then *▲▼*. Press * until 12 Hr, 24 Hr, or Dela displays then press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting. To set *delayed start (Dela)*, see *operating instructions*.

- **To change clock:**

Press [▲▼], then *▲▼*. Press * until clock displays then press ▲ or ▼ to change flashing hour; press * to move to minutes and ▲ or ▼ to change setting. Press * until *End* displays then press [▲▼] to save new setting.

- **To change the sampling time function:**

Press [▲▼], then *▲▼*. Press * until *ST L/min* displays then press ▲ to change flashing digit; press * until *End* displays then press [▲▼] to save new setting. To delete, follow above steps and press ▼ until 0 appears. Exit Setup.

Note: When in Setup, choosing Esc instead of End will exit Setup without saving new settings.

CALIBRATION AND SAMPLING

Calibration


Calibrate pump flow rate with the IMPACT Sampler in line (loaded with filter and impaction disc). *See pump and calibrator operating instructions.*

! Allow pump to equilibrate after moving it from one temperature extreme to another.

1 Set pump flow rate to 10 L/min (see Leland Legacy Quick Guide on page 10). Ensure the pump has run for 5 minutes before proceeding with calibration. Ensure rain cover is removed from inlet and that impactor is loaded and fully assembled (see Inserting a Collection Filter into the IMPACT Sampler and Inserting an Impaction Disc into the IMPACT Sampler).



2 Screw calibration adapter onto impactor inlet.

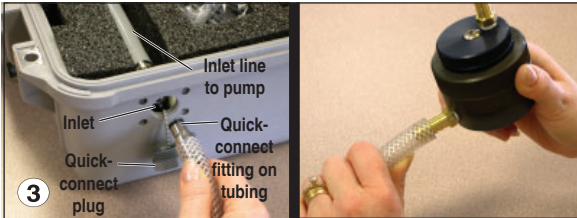


3 Unscrew quick-connect plug. Use tubing with quick-connect fitting to attach case (pump) inlet to outlet of impactor.

! Ensure O-ring is installed on the quick-connect fitting before inserting it into the inlet. Absence of the O-ring can affect measurements.



4 Use short length of calibration tubing to connect inlet of calibration adapter to outlet of a flowmeter or calibrator to form a calibration train. **Note:** If using SKC High Flow chek-mate Calibrator, Pulsation Dampener Cat. No. 375-150 is required in line as shown at above right and in Step 5 (see Accessories).

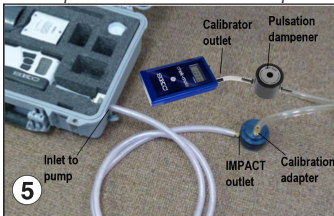

6

When calibration is completed, disconnect flowmeter or calibrator and tubing from calibration adapter. Remove calibration adapter from impactor.


Calibrate pump flow rate with flowmeter. **Adjust** flow rate until flowmeter displays between 9.5 and 10.5 L/min (see Leland Legacy Quick Guide on page 10). Record flow rate. Reset accumulated data before sampling. See pump and flowmeter/calibrator operating instructions.

Sampling

1. If required, replace representative sample media used for calibration with new, pre-weighed media (*see Media Preparation and Impactor Preparation*).
2. Mount bracket at the desired location and at breathing zone height (6 feet or 2 meters) using wire ties or other fasteners. Mount impactor on mounting bracket by threading clamp knob into bottom of impactor.



3. Insert screw on rain cover into screw hole in top of impactor inlet and rotate cover until tight.

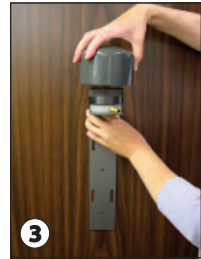

4. Turn on pump and record sample start time, ambient temperature, ambient pressure, and other pertinent data.



Sample start time and duration can be programmed into the Leland Legacy Sample Pump in advance and sampling may be started manually or automatically.




Record all necessary data before disconnecting pump from battery and reconnecting to new battery.

5. After desired sample time has elapsed, turn off pump and record sample stop time, total volume, ambient temperature, ambient pressure, and other pertinent data.

6. Remove rain cover, reinstate calibration train, and verify flow rate (*see Calibration*).

7. Reach inside case and press quick-connect release while pulling tubing from inlet. Remove tubing from impactor.

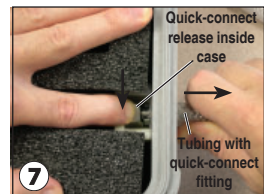

Technical Tidbits

- The supplied rain cover should be used for all outdoor sampling.
- Keep Leland Legacy sample pump inside the Pelican case and the case closed during sampling to protect sample pump from weather.

SAMPLE REMOVAL, SHIPPING, AND ANALYSIS

Removing the Collection Filter and Impaction Disc



Unscrew impactor inlet from exhaust.



Locate recessed area on filter cassette top and remove impaction disc. If chemical analysis of larger particles is desired, place in appropriate container for shipping to a laboratory for analysis (see *Ordering Information, Accessories for glass jars*).



Gently lift filter cassette from exhaust.



- 4a. Use the filter cassette opener to separate the two halves.
- 4b. Slide the filter cassette horizontally into the "U" of the opener until the two halves of the cassette loosen. Gently pull halves apart.



Use forceps to remove collection filter and place in appropriate container for shipping to a laboratory.

Shipping Samples

Package and transport samples and blanks in a manner that will prevent sample loss and contamination. See *Ordering Information, Accessories for the petri dish slide for transporting samples*.

Analysis

Gravimetric and/or chemical by an accredited laboratory

ORDERING INFORMATION

Description	Cat. No.
DPS System **†∞ includes a Leland Legacy Sample Pump with connection case and charger (100-240 V), 2 external battery assemblies with adapters (packaged separately), IMPACT sampling head, 2 filter cassettes, calibration adapter, rain cover for sampling head, 25 disposable impaction discs ^Δ , filter cassette opener, tubing with quick-connect fitting, calibration tubing, and mounting bracket, in a heavy-duty lockable carry case	
PM10 Kit	100-3901*
PM10 Kit with flowmeter	100-3900*
PM2.5 Kit	100-3903*
PM2.5 Kit with flowmeter	100-3902*

* Provides data similar to data from Federal Reference Method samplers. The DPS System is not a U.S. EPA reference or equivalent method for compliance sampling.

† Quantity discounts available

DPS Systems contain Leland Legacy pumps with Li-Ion batteries and may be subject to special shipping regulations.

Δ Limited shelf-life

∞ Use in non-explosive environments only. Not intrinsically safe

Recommended Collection Filters for System	
Select a collection filter based on your application; required for sampling	
Quartz Filters , 47 mm, Tissuquartz™, 432 μm thick, pk/25	225-1823
PTFE Filters §‡, 47 mm, 2.0-μm pore size, with PMP support ring, pk/50	225-1747§‡

Impaction Discs for System		
Select an impaction disc based on your application.		
Recommended to Reduce Particle Bounce:		
Replacement Pre-oiled Impaction Discs	pk/25	225-395
porous plastic discs, 37 mm, pre-oiled, <i>limited shelf-life</i>	pk/50	225-395A
For Chemical Analysis of Larger Particles:		
Quartz Filters , 37 mm, Tissuquartz™, 432 μm thick, pk/25		225-1822
PTFE Filters §, 37 mm, 2.0 μm, laminated PTFE support, pk/50		225-27-07§

§ Back pressure on PTFE filters can vary within the same lot.

‡ Maximum operating temperature is 464 F (240 C) based on PMP support ring.

Accessories		
Forceps , stainless steel		225-8371
Petri Dish Slide , for filter transport, pk/100		225-2-01
Glass Jars for Chemical Analysis	pk/8	225-8376
	pk/36	225-8377
DataTrac Software Cable , for Leland Legacy, USB; <i>software available via free download from www.skcin.com</i>		877-92
High Flow chek-mate Calibrator with CalChek , 5 to 30 L/min, includes 9-volt alkaline battery		
with NIST standard traceable calibration certificate		375-50300N
with UK standard traceable calibration certificate		375-50300
with ISO standard traceable calibration certificate		375-50300S
Pulsation Dampener , <i>required for use with High Flow chek-mate</i>		375-150
Kit with High Flow chek-mate Calibrator and Pulsation Dampener Cat. No. 375-150		
with NIST standard traceable calibration certificate		375-50300-KN
with ISO standard traceable calibration certificate		375-50300-KNS

ORDERING INFORMATION

Replacement Parts		Cat. No.
IMPACT Sampler Inlets	PM10	P54202
	PM2.5	P54204
IMPACT Sampler Inlet O-rings, pk/3		P31989
IMPACT Sampler Exhaust		P21279
IMPACT Sampler Exhaust O-ring		P31988
Quick-connect O-rings, pk/3		P31996
Filter Cassette		225-396
Cassette Opener		225-397
Rain Cover, grey		225-398
Mounting Bracket		225-399
Quick-connect Fitting, on 6.5-foot reinforced PVC tubing		P42741
Reinforced Flexible PVC Tubing, 6.5 feet		P30004
Silicone Tubing, 0.4 feet, pk/2		P30255A
Calibration Adapter		225-394
DPS Operating Instructions		P40101
DPS/Leland Legacy Quick Guide		P37139
Leland Legacy Pump Operating Instructions		P40075
Calibration Tubing, 1.5 feet, Tygon®		P3006
Quick-connect Plug with retaining chain		P42742
External Battery Assembly with battery adapter		223-247
Battery Adapter for replacement of adapter on external battery assembly (Cat. No. 223-247)		223-248
Battery Connection Case with cable and plug		223-249
DPS/DVS Charger Adapter		223-245
DPS/DVS Charging Unit		P22300

LI-ION BATTERY SHIPMENT

Rechargeable lithium-ion batteries for use with SKC sample pumps have been tested in accordance with the UN Manual and are proven to meet requirements of each test in the *UN Manual of Test Criteria*, Part III, subsection 38.3. They have a watt-hour (Wh) rating below 100.

Per 2010 IATA regulations, packaging must meet the specifications of and contain labeling and documentation required by IATA Packing Instructions 965, 966, and 967. See *IATA Guidance Document: Transport of Lithium Metal and Lithium Ion Batteries, Revised for the 2010 Regulations*

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to skcinc.com/warranty.